


# Wiring Diagram Type 944, 944 turbo Model 86 Sheet 2

LIGHTING USA

Wiring

97

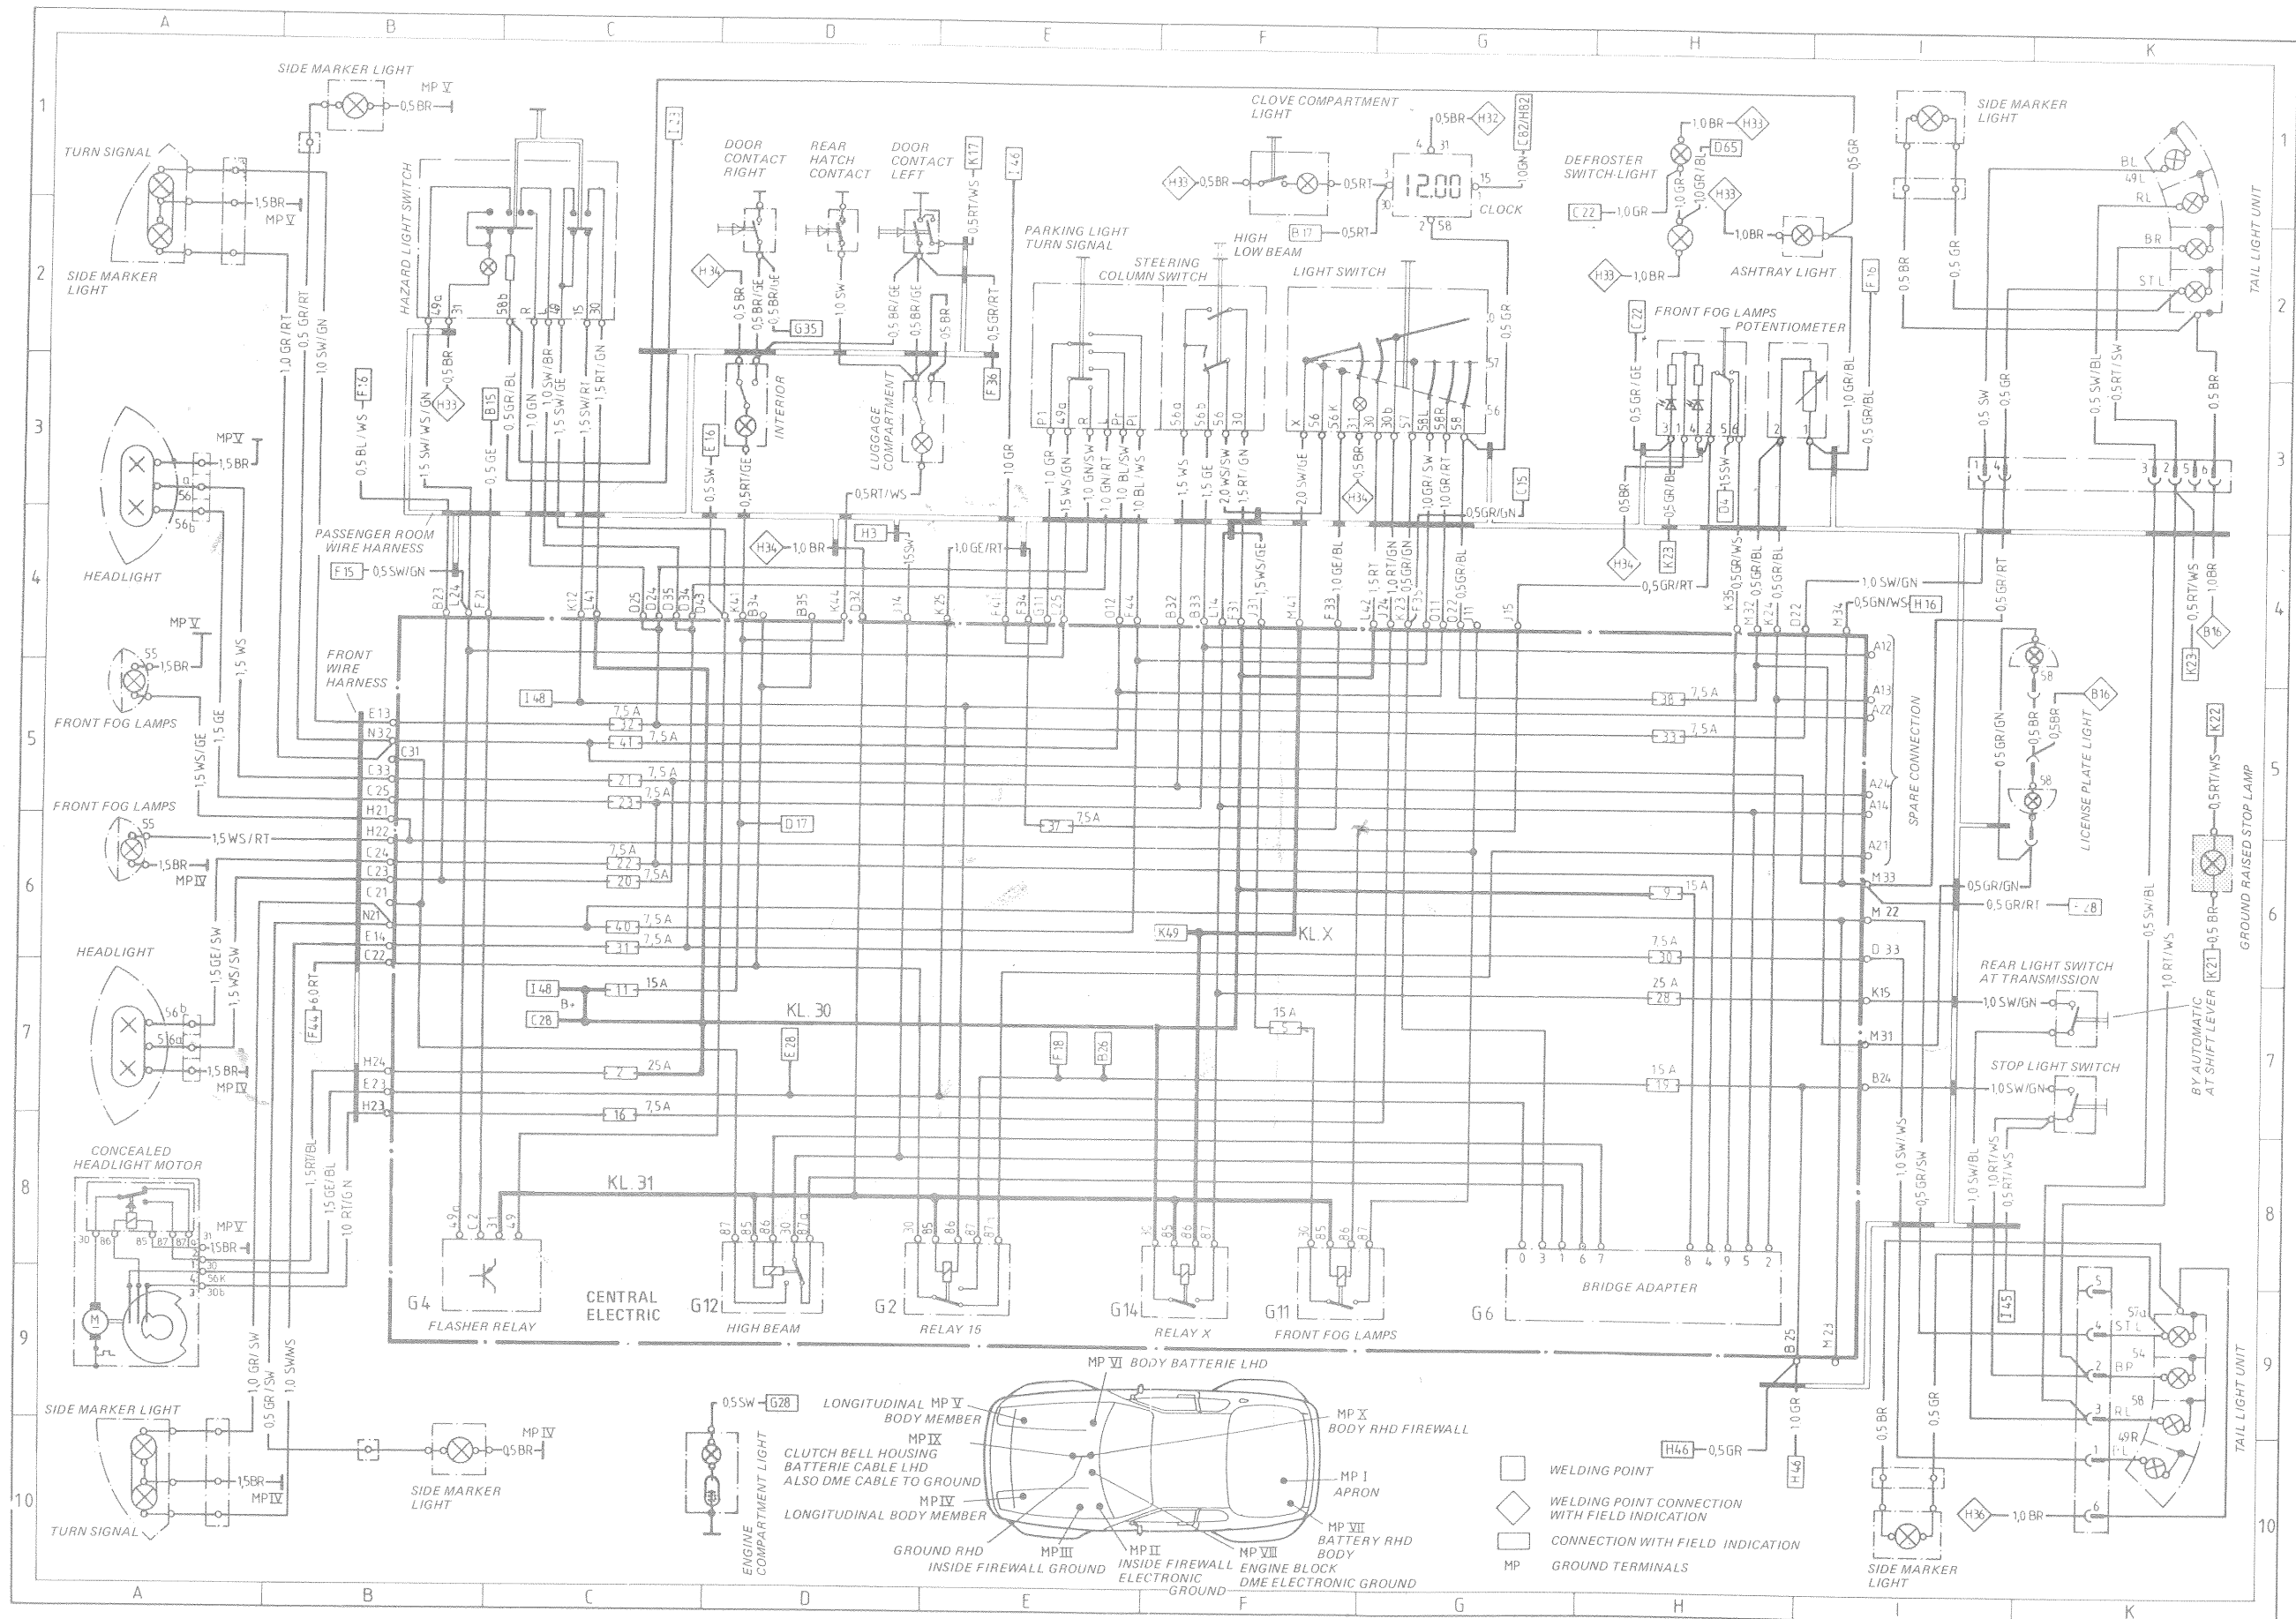

SW = BLACK WS = WHITE RT = RED GN = GREEN GE = YELLOW GR = GREY BR = BROWN BL = BLUE LI = VIOLET


MP = GROUND TERMINALS

Current Flow Diagram

97-75


# Wiring Diagram Type 944, 944 turbo Model 86 Sheet 4

INSTRUMENT CLUSTER AND SENSORS USA

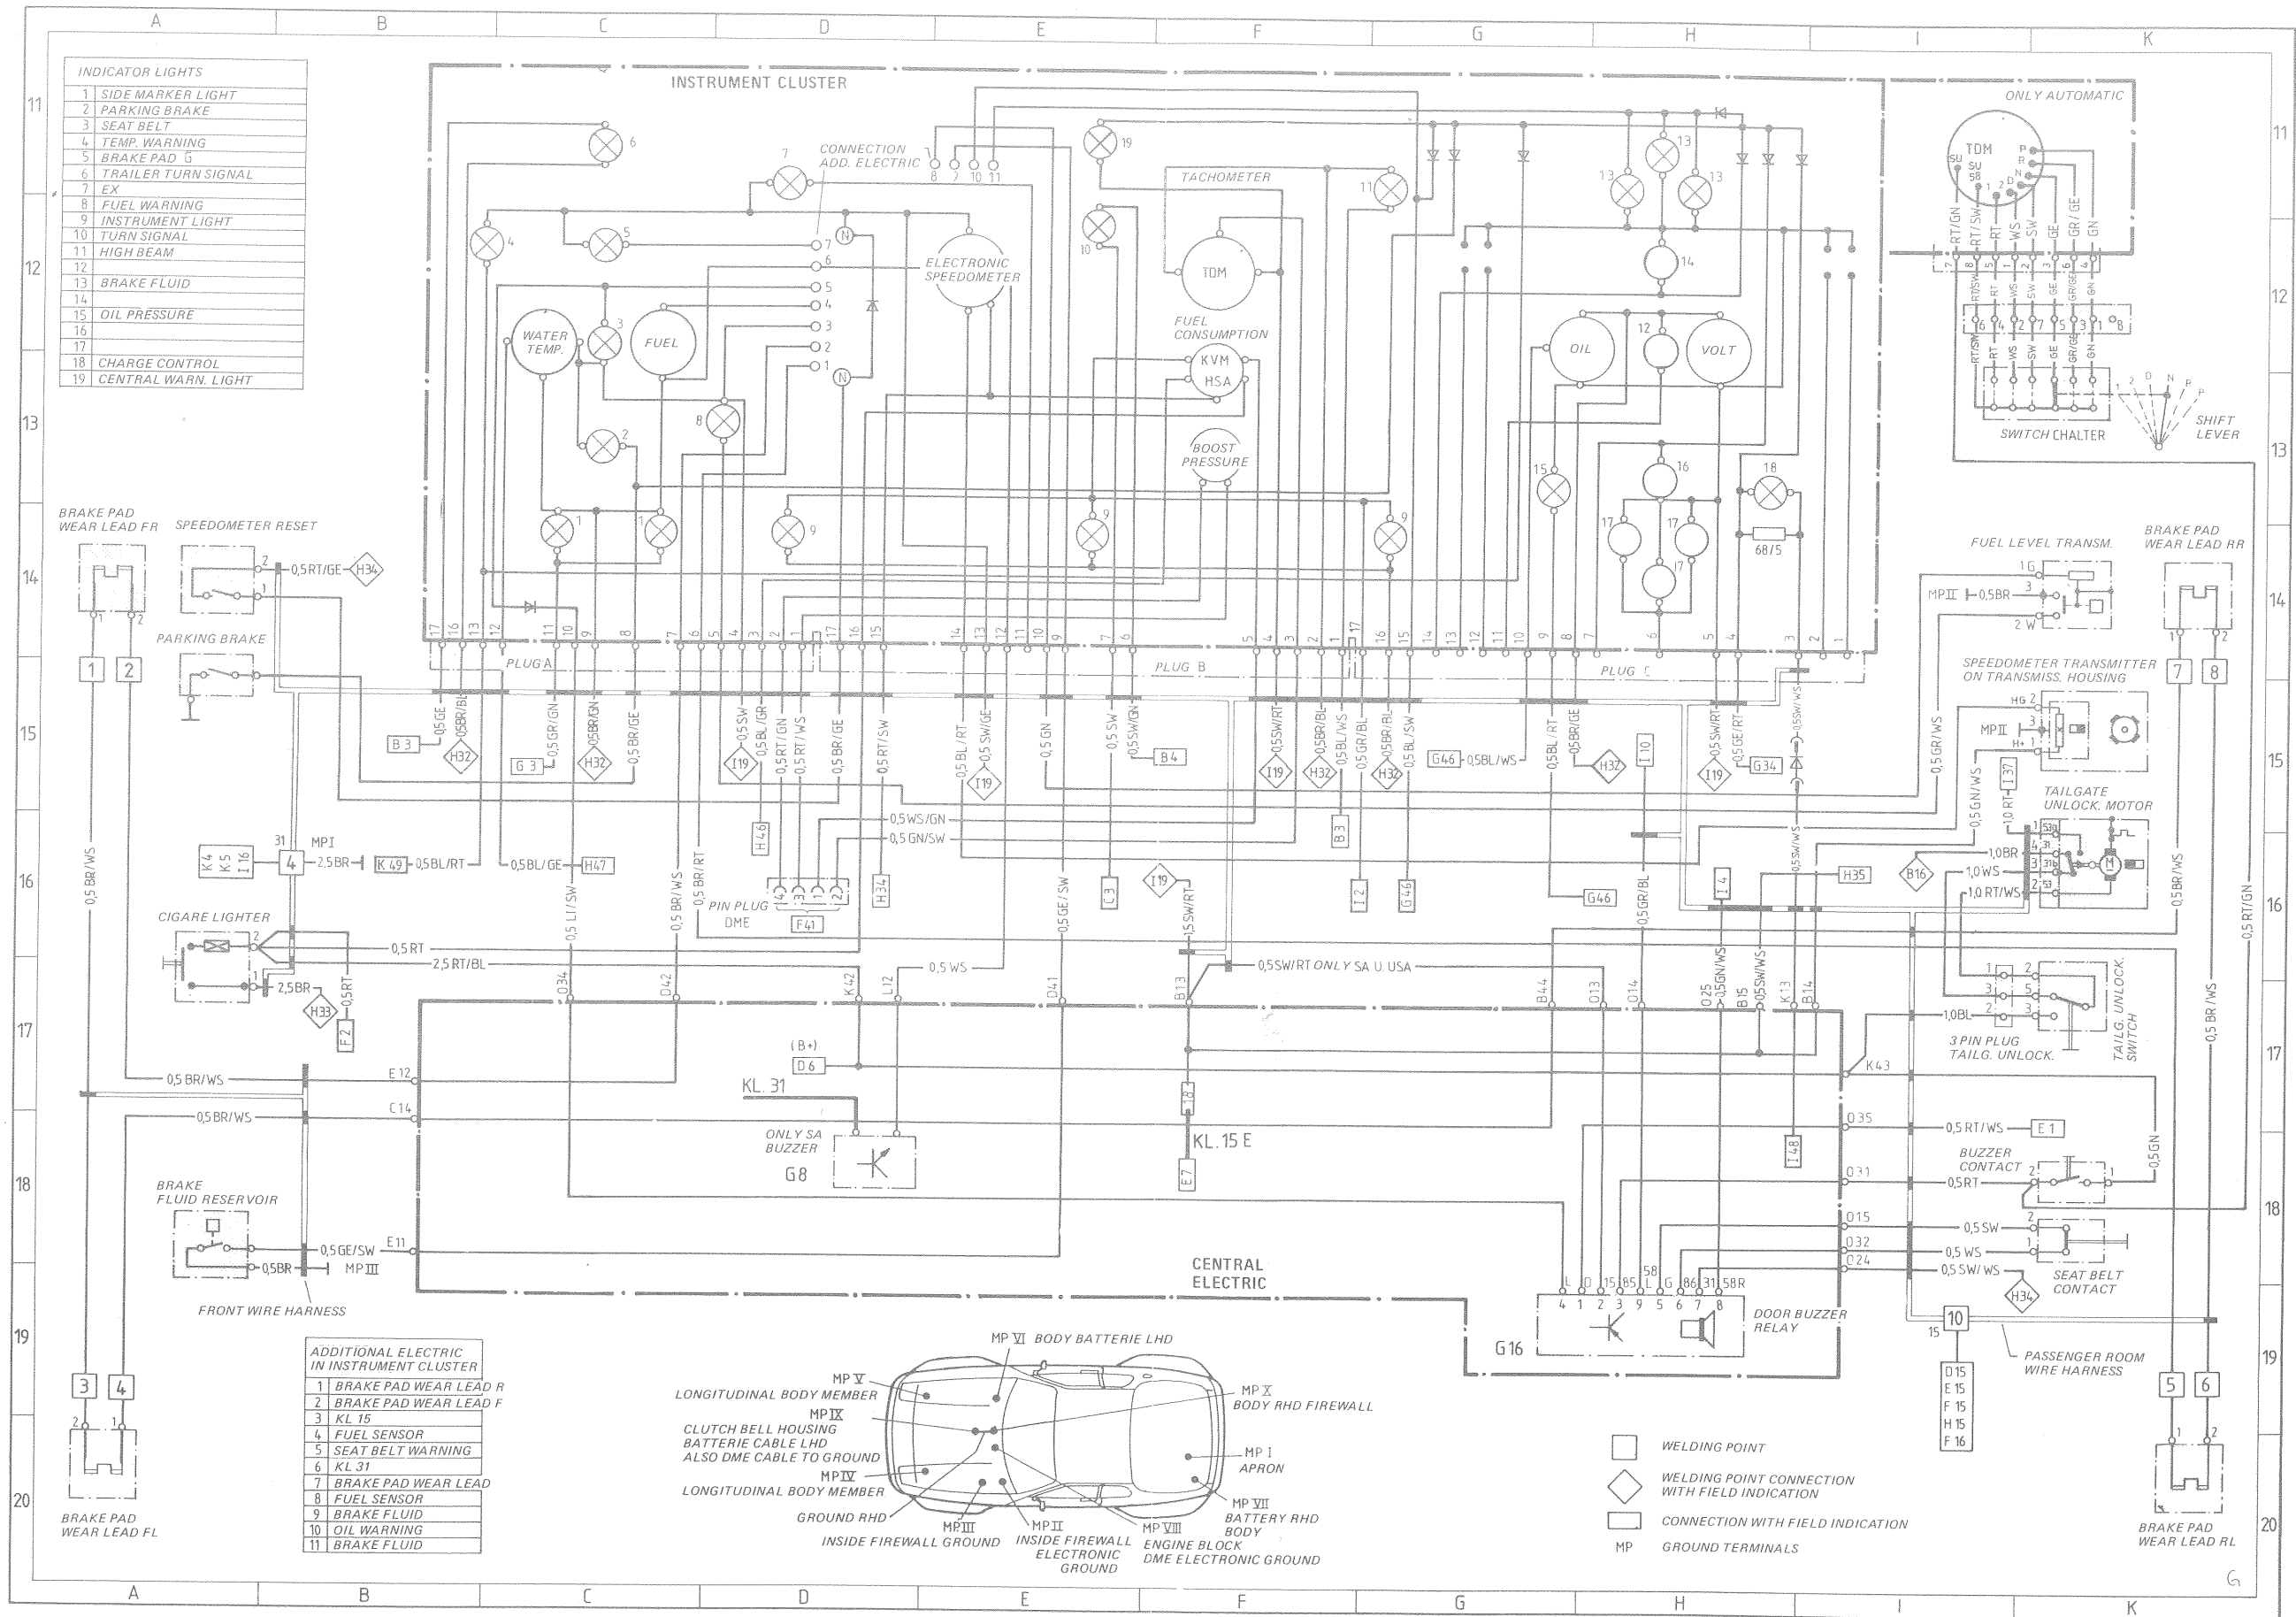

# Wiring Diagram Type 944, 944 turbo Model 86 Sheet 5

HEATING, AC, VENTILATION, ELECTR. SEATS, WIPER AND WASHER SYSTEM

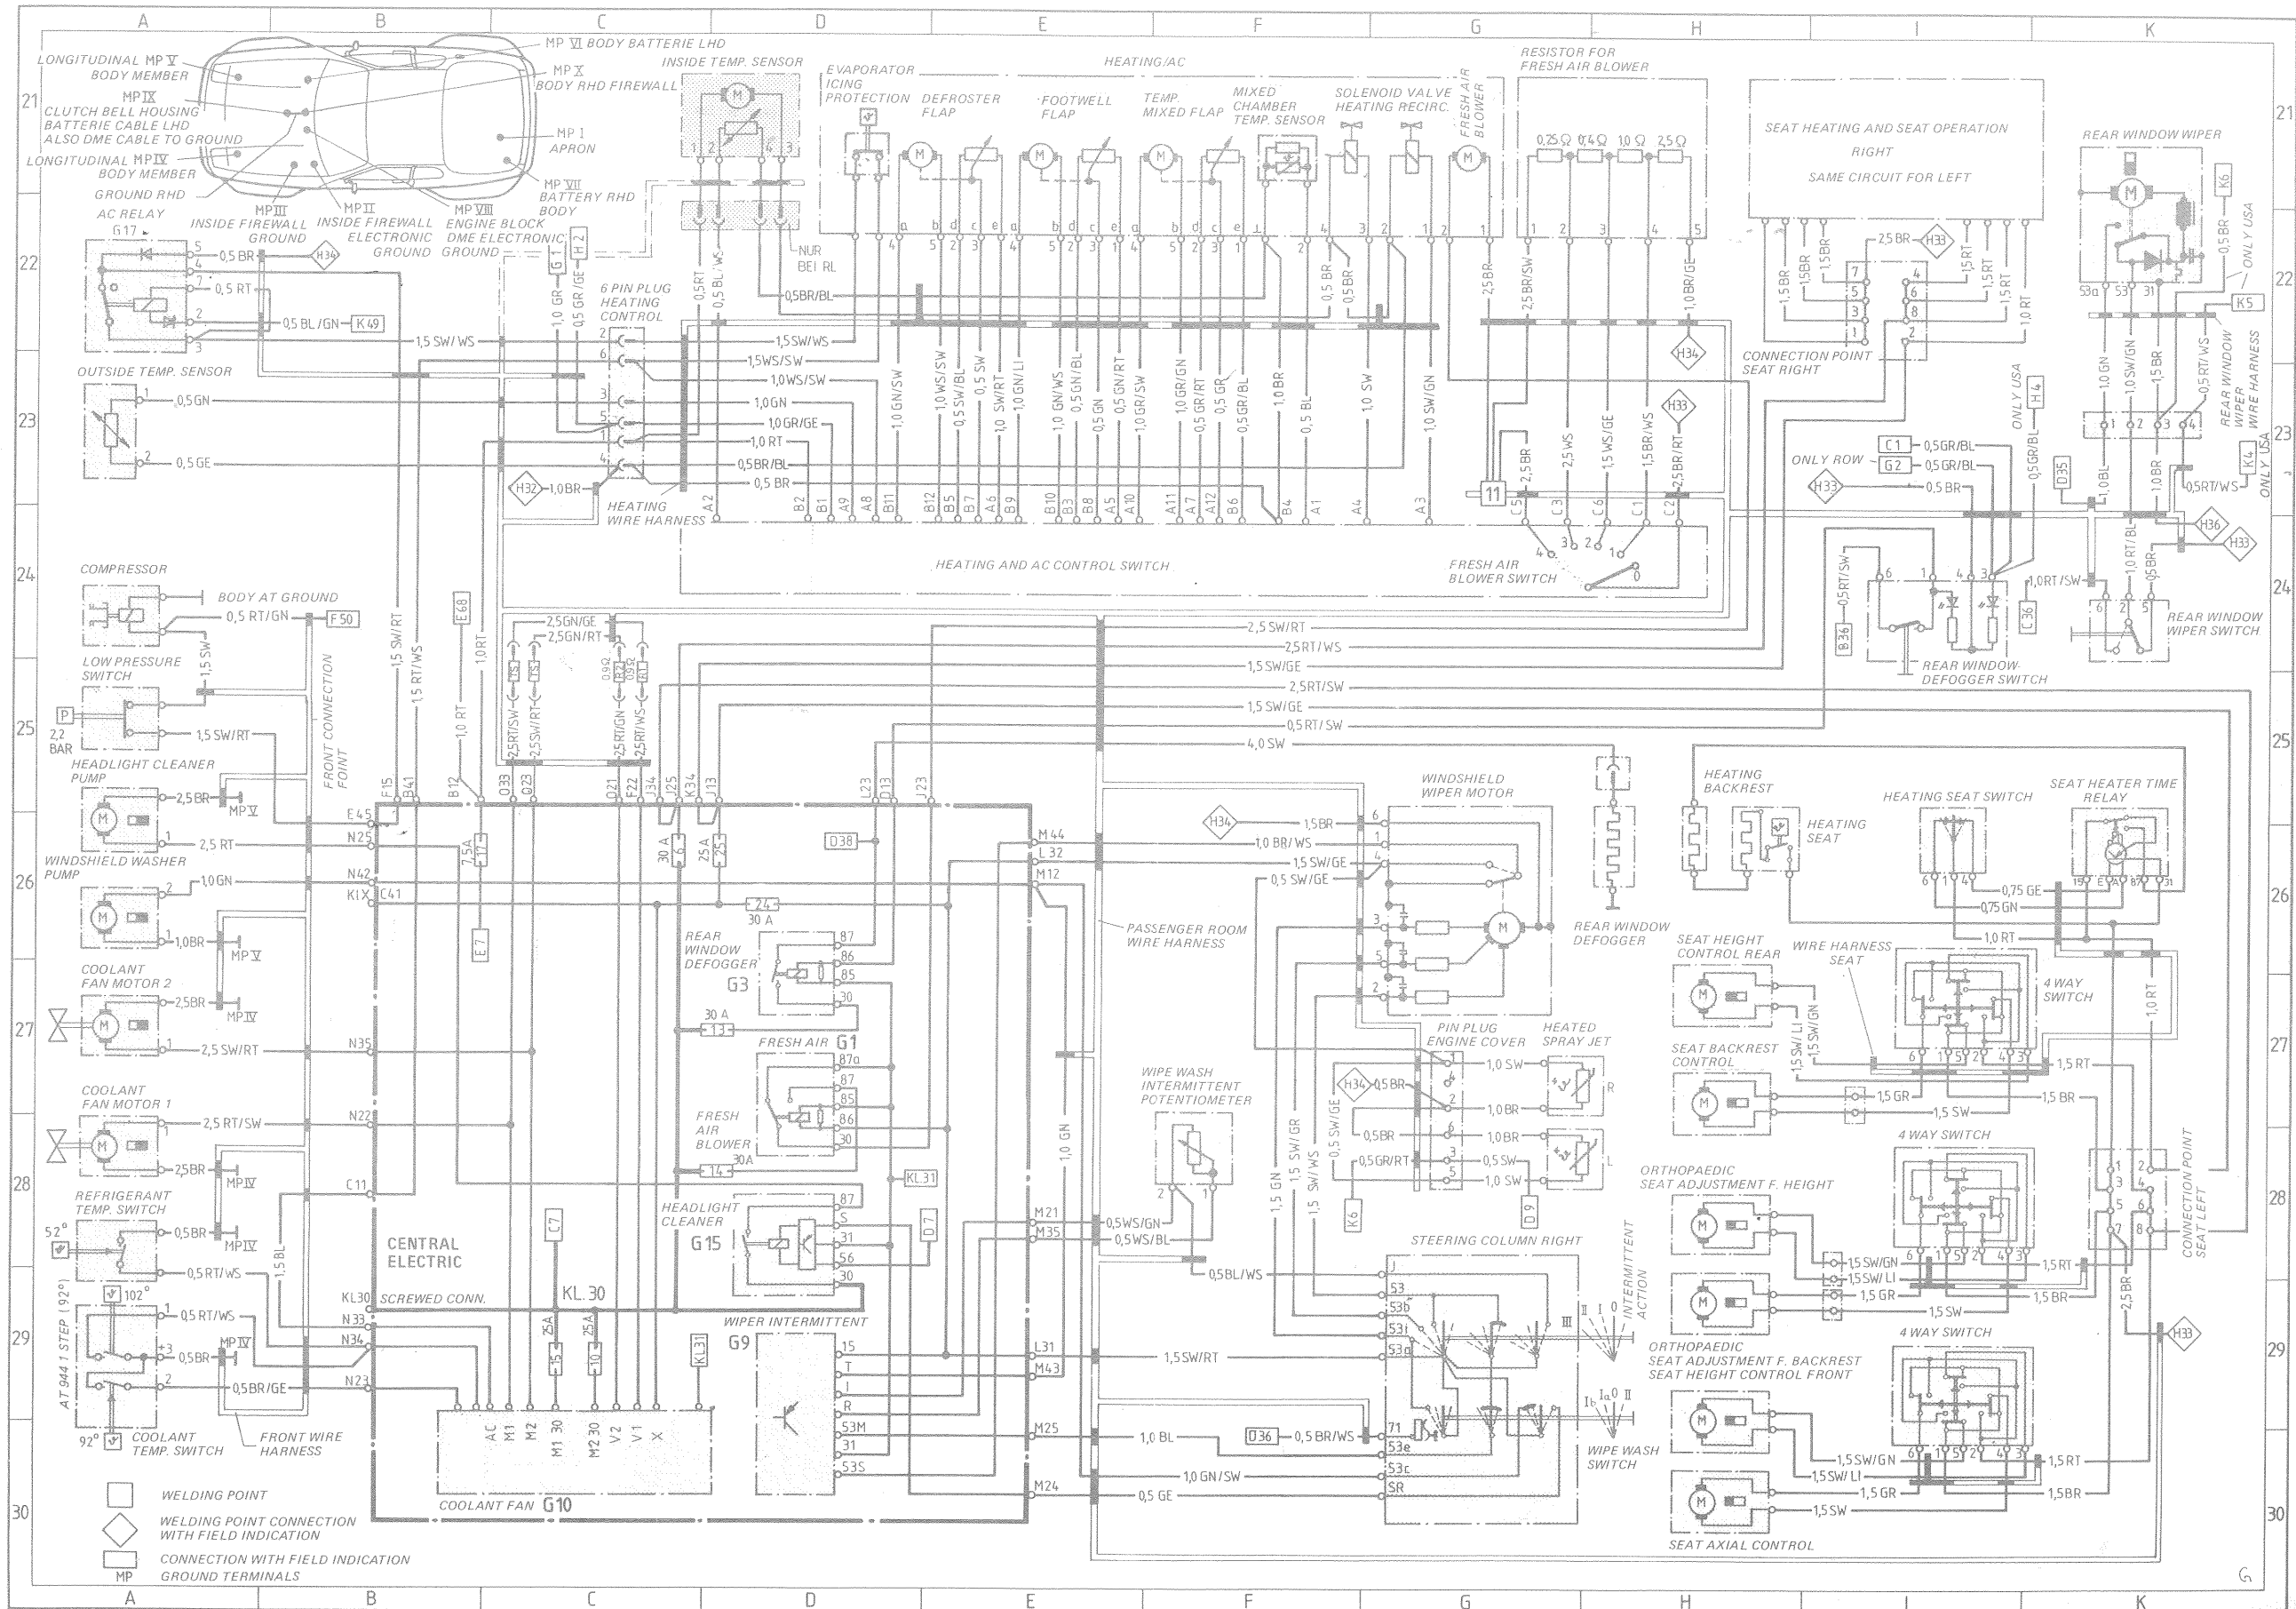


SW = BLACK WS = WHITE RT = RED GN = GREEN GE = YELLOW GR = GREY BR = BROWN BL = BLUE LI = VIOLET

MP = GROUND TERMINALS

Current Flow Diagram

# Wiring Diagram Type 944, 944 turbo Model 86 Sheet 6


HORNS, MIRRORS, WINDOW LIFTERS, ALARM SYSTEM, TILTING ROOF

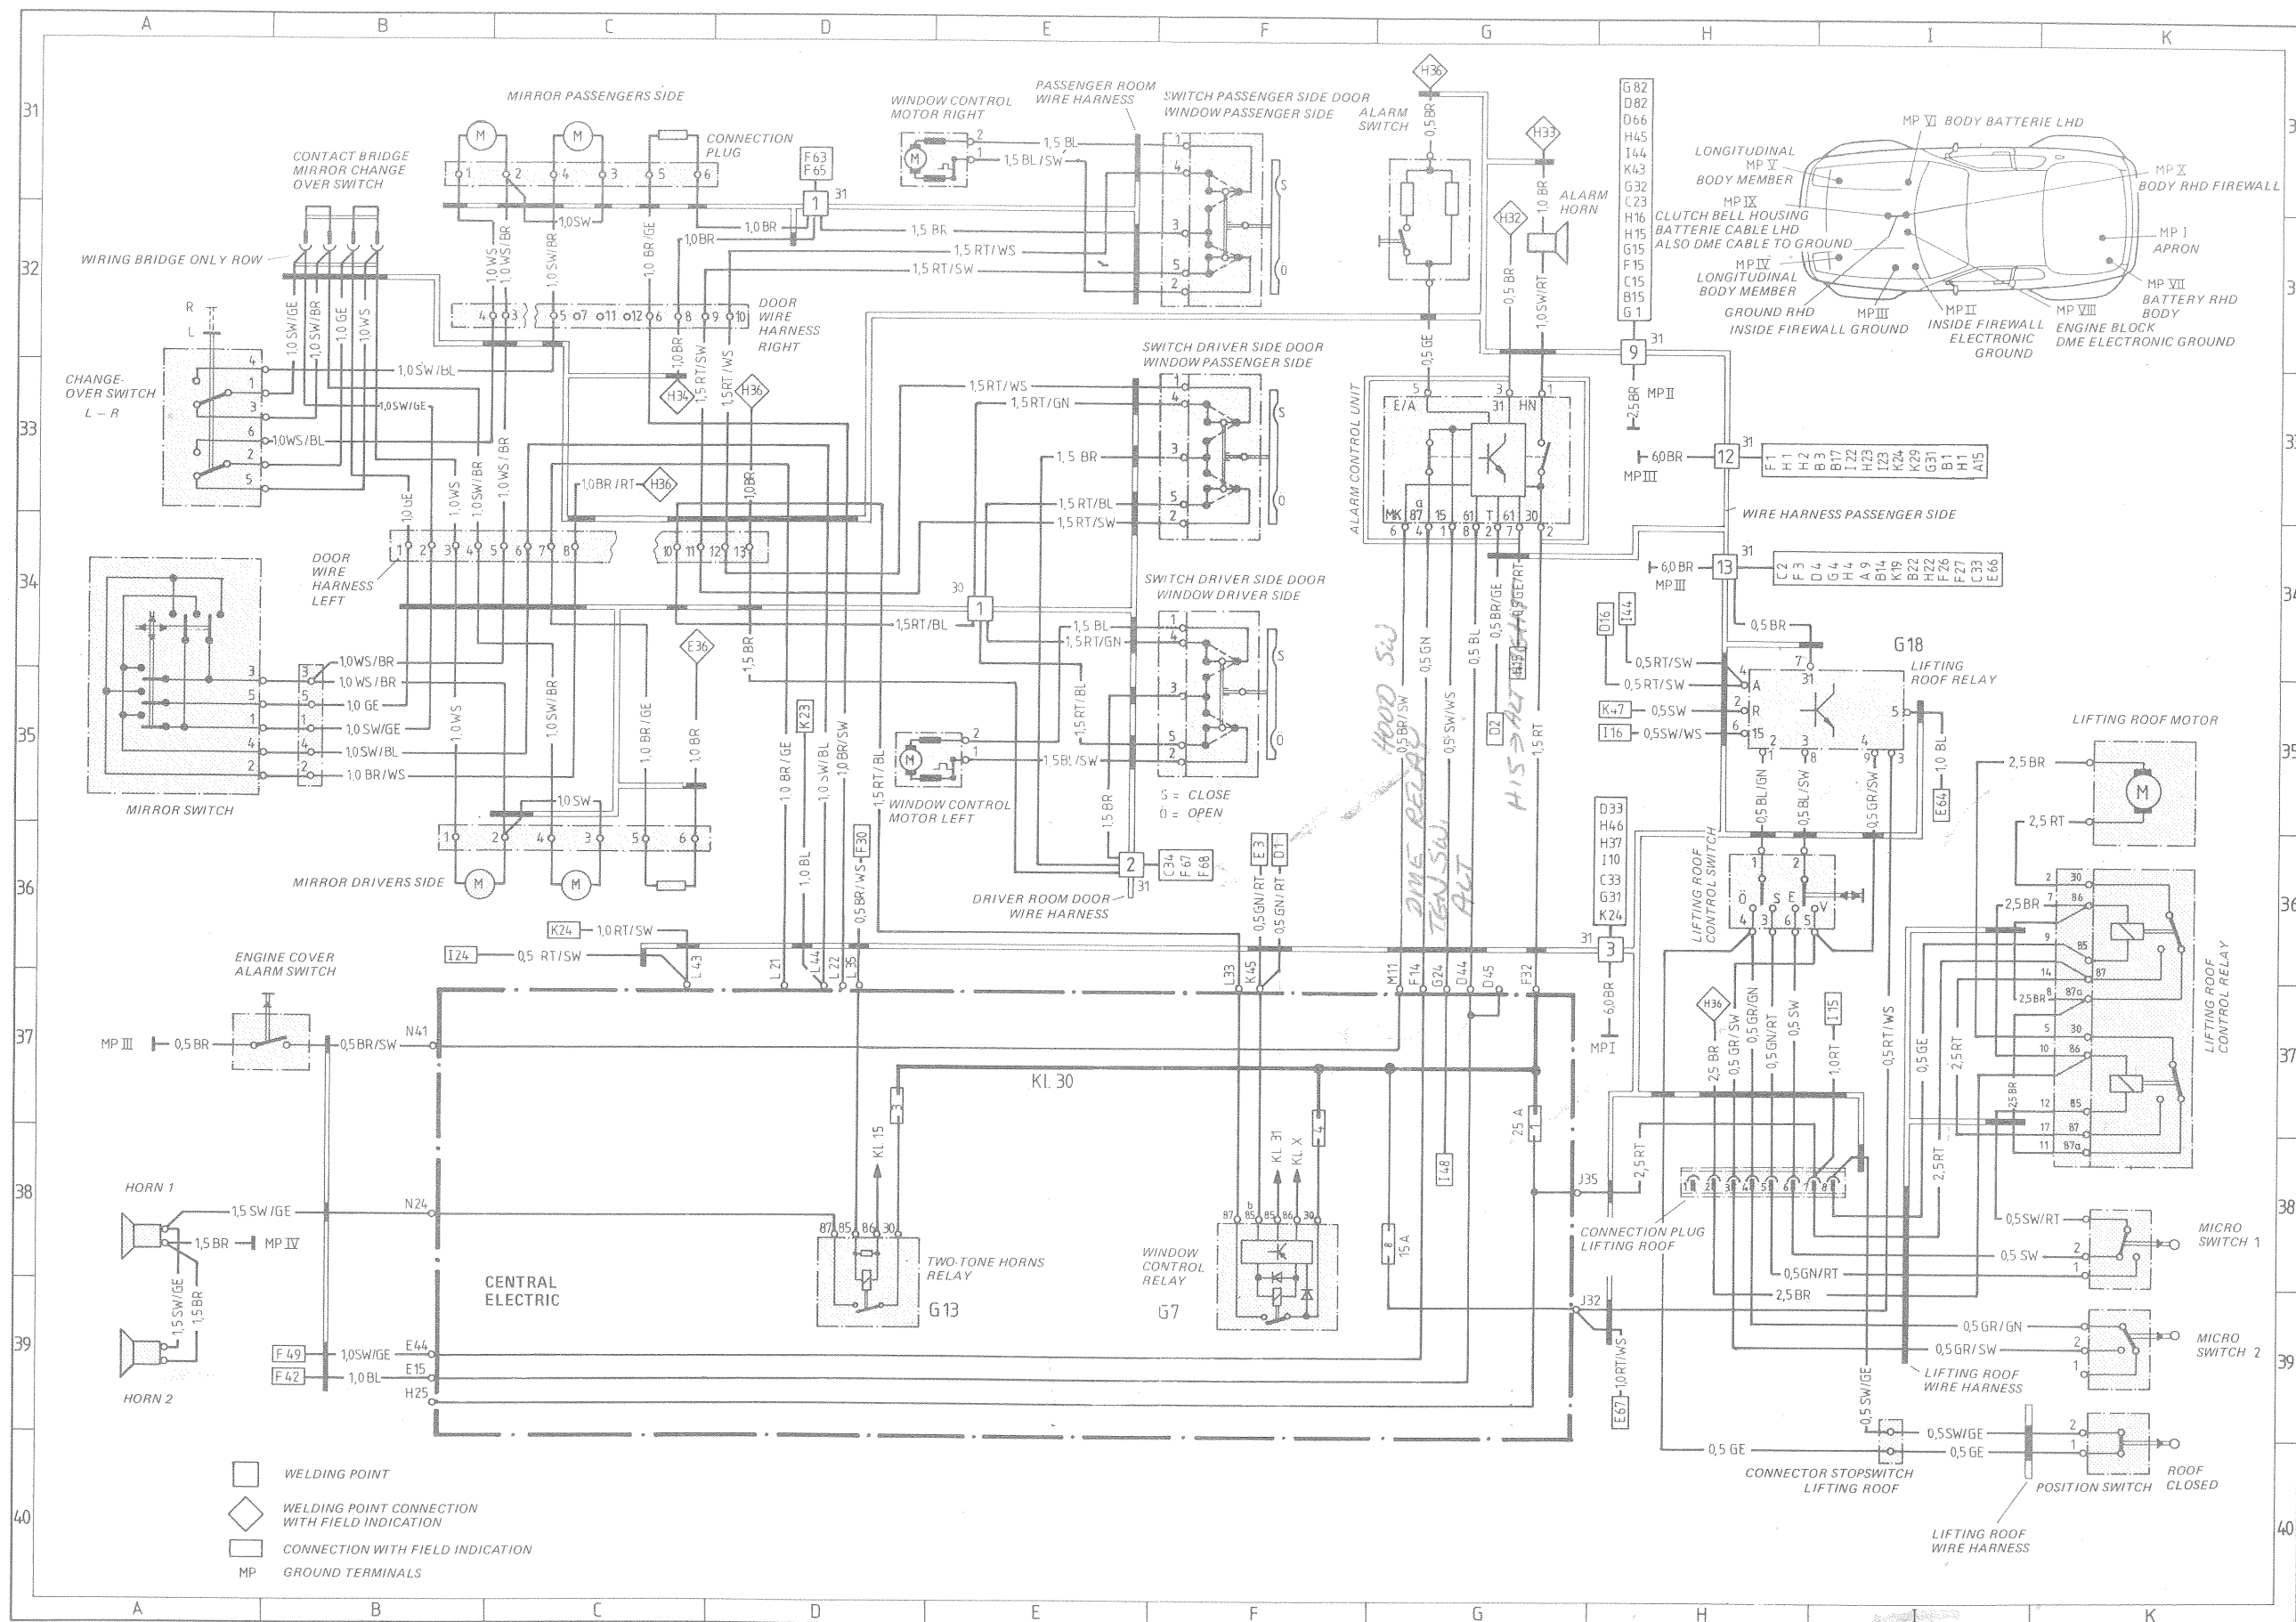

LT &  
RT DOOR  
CONTACT SW'S  
REAR HATCH  
SW

# Wiring Diagram Type 944, 944 turbo Model 86 Sheet 7

ENGINE COMPARTMENT, TEMPOSTAT - 944

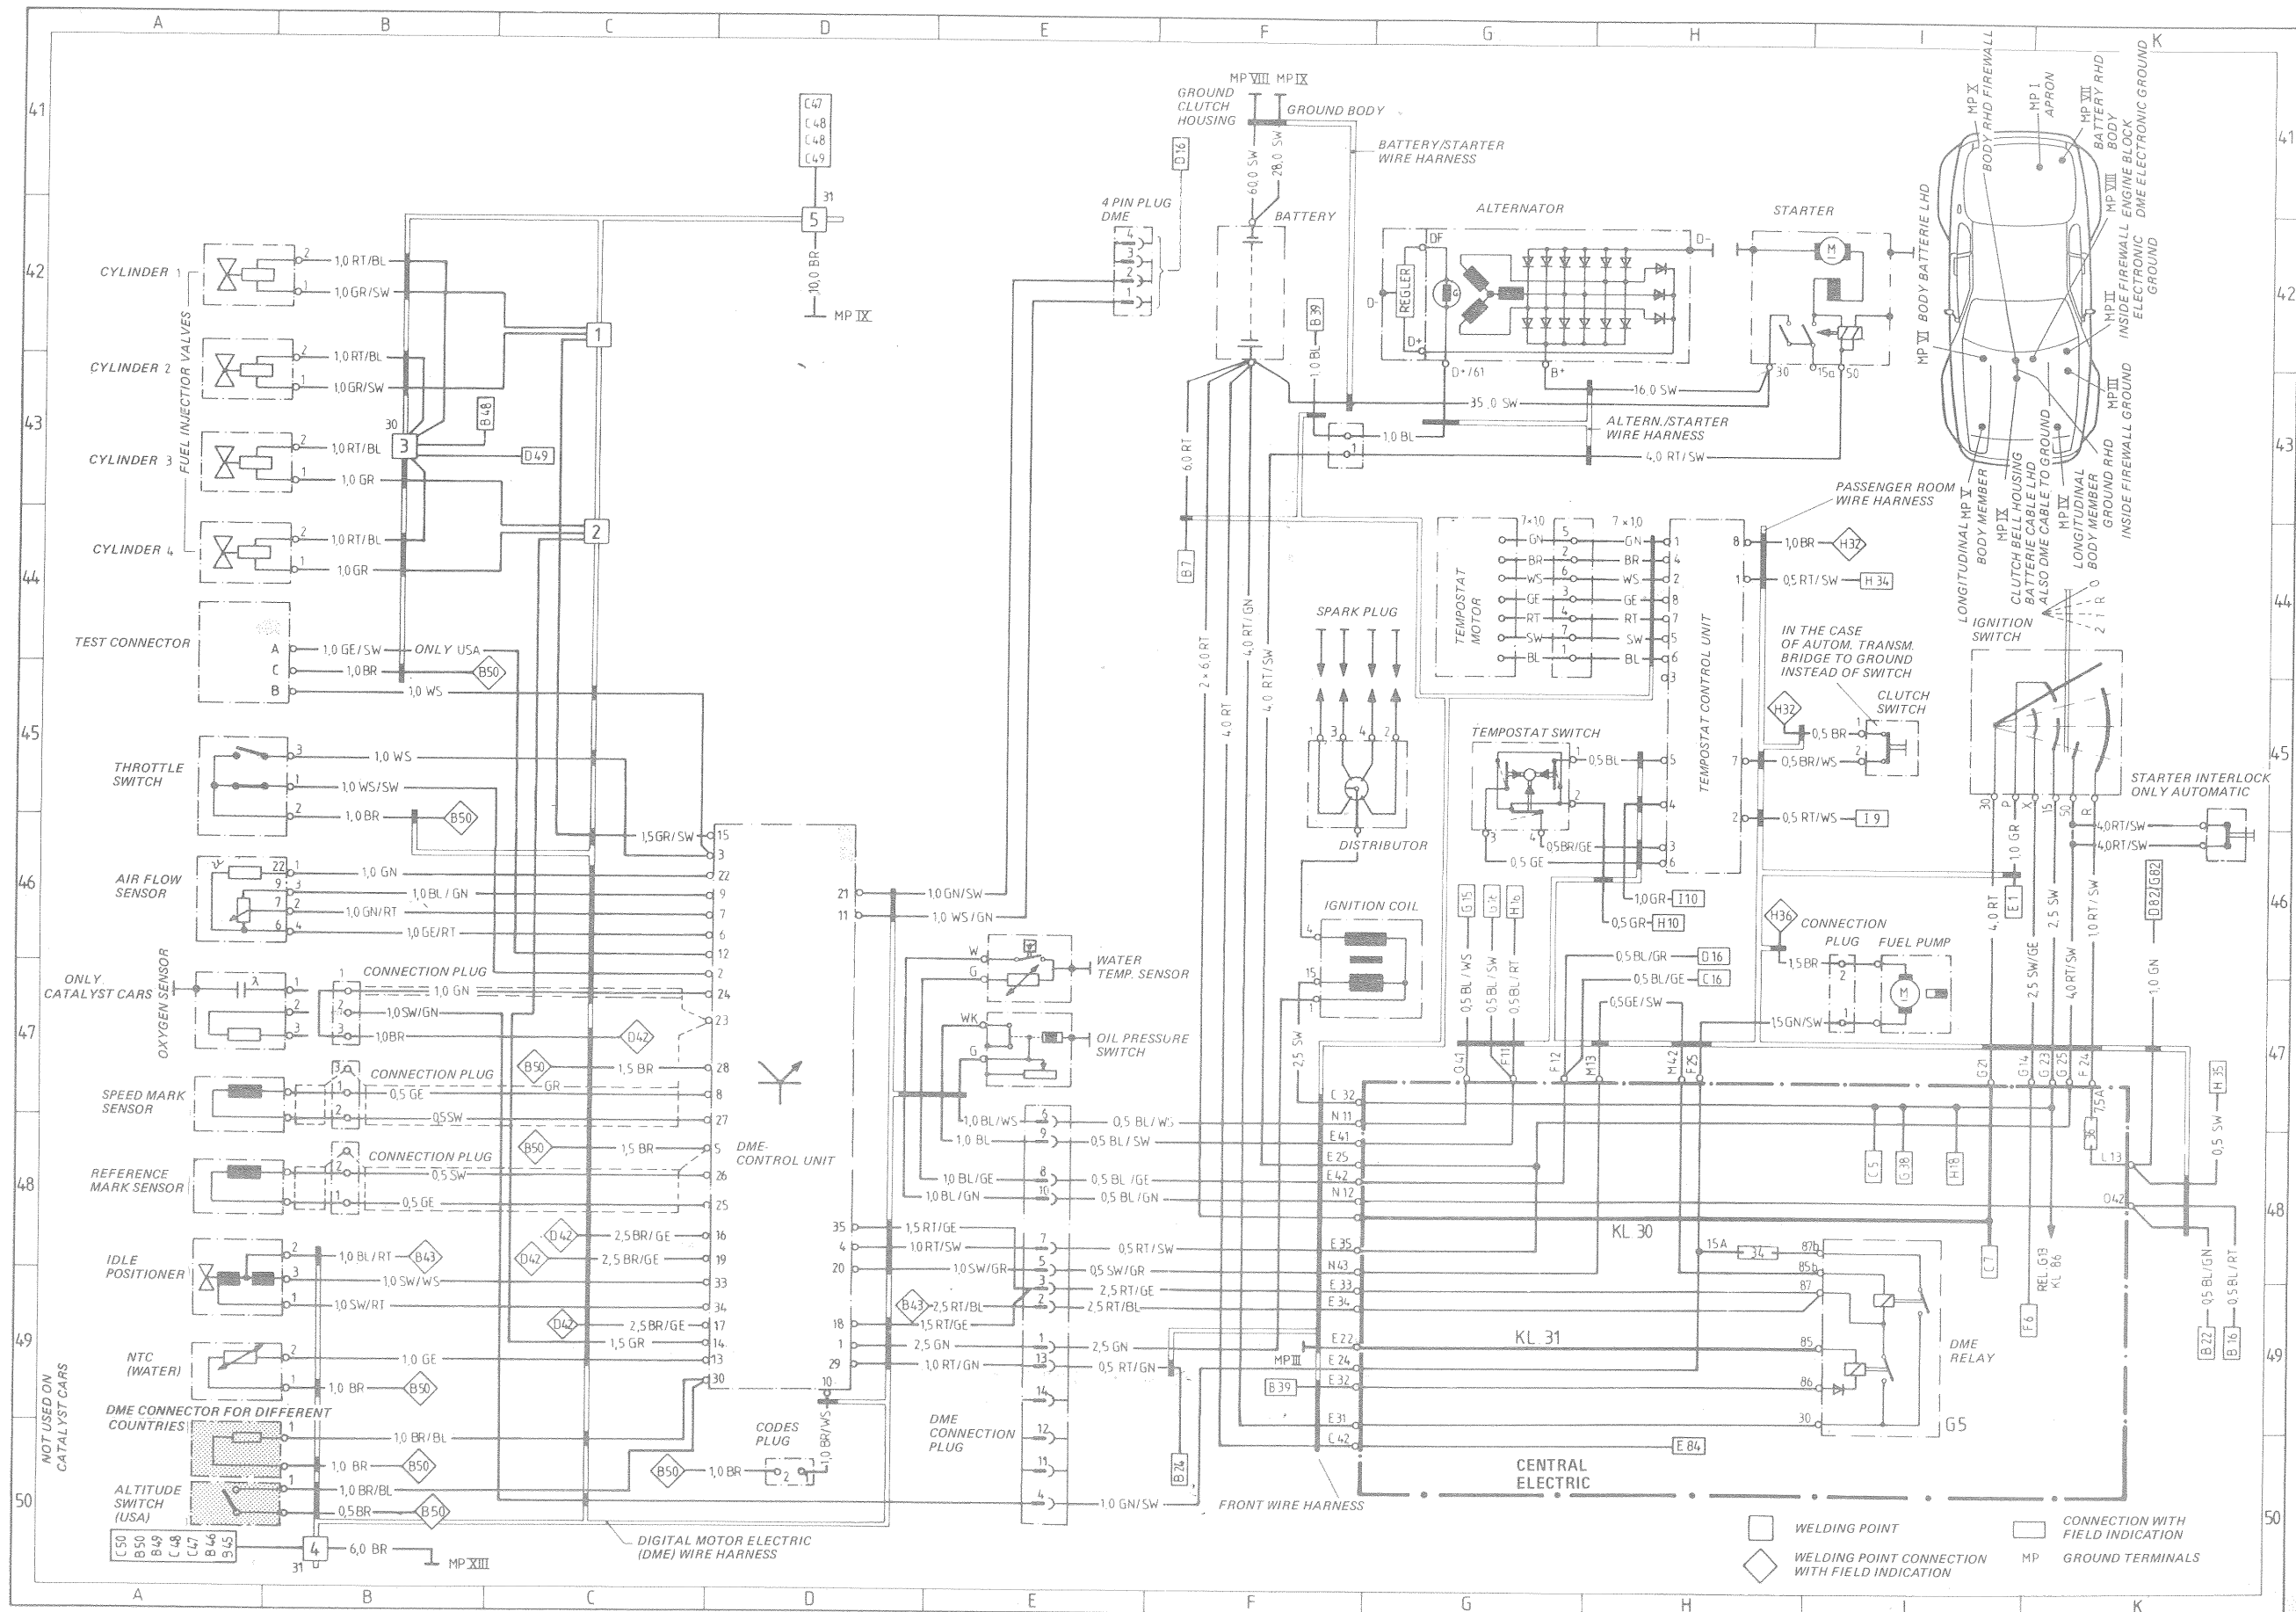


SW = BLACK WS = WHITE RT = RED GN = GREEN GE = YELLOW GR = GREY BR = BROWN BL = BLUE LI = VIOLET

MP = GROUND TERMINALS

Current Flow Diagram 97-85

# Wiring Diagram Type 944, 944 turbo Model 86 Sheet 8

ENGINE COMPARTMENT, TEMPOSTAT - 944 TURBO

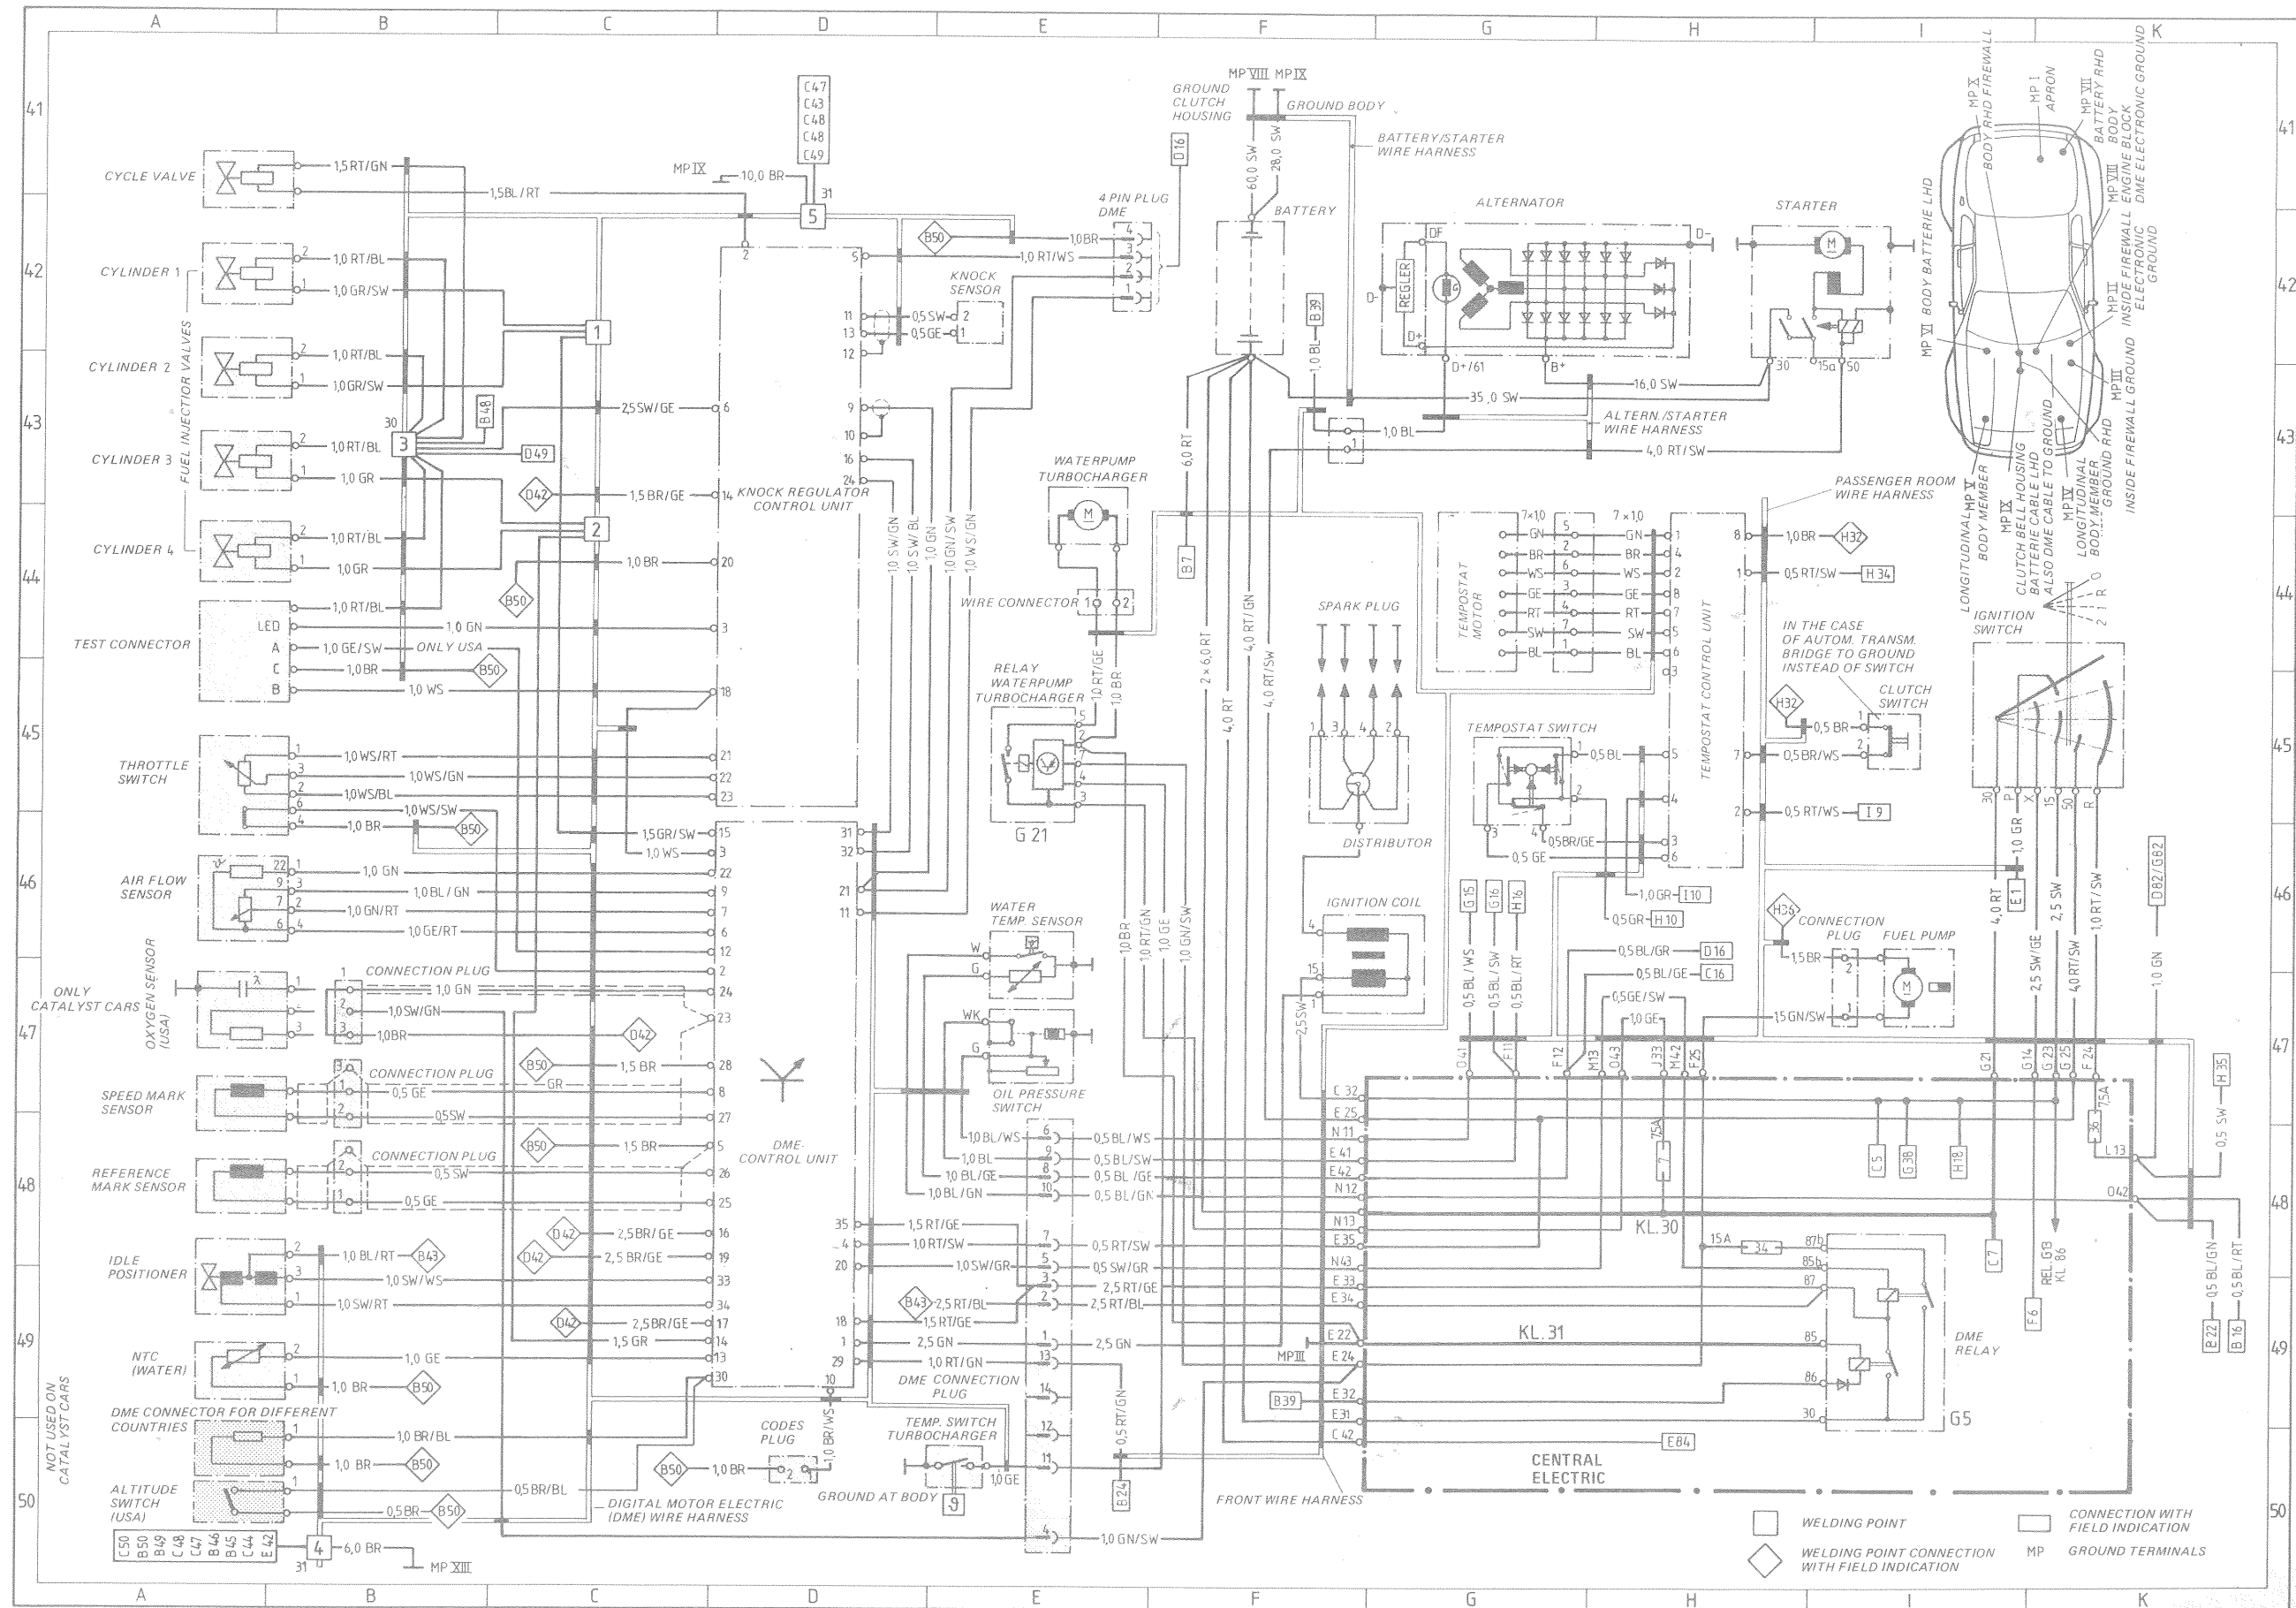


SW = BLACK WS = WHITE RT = RED GN = GREEN GE = YELLOW GR = GREY BR = BROWN BL = BLUE LI = VIOLET


MP = GROUND TERMINALS

Current Flow Diagram

## CENTRAL ELECTRICAL SYSTEM

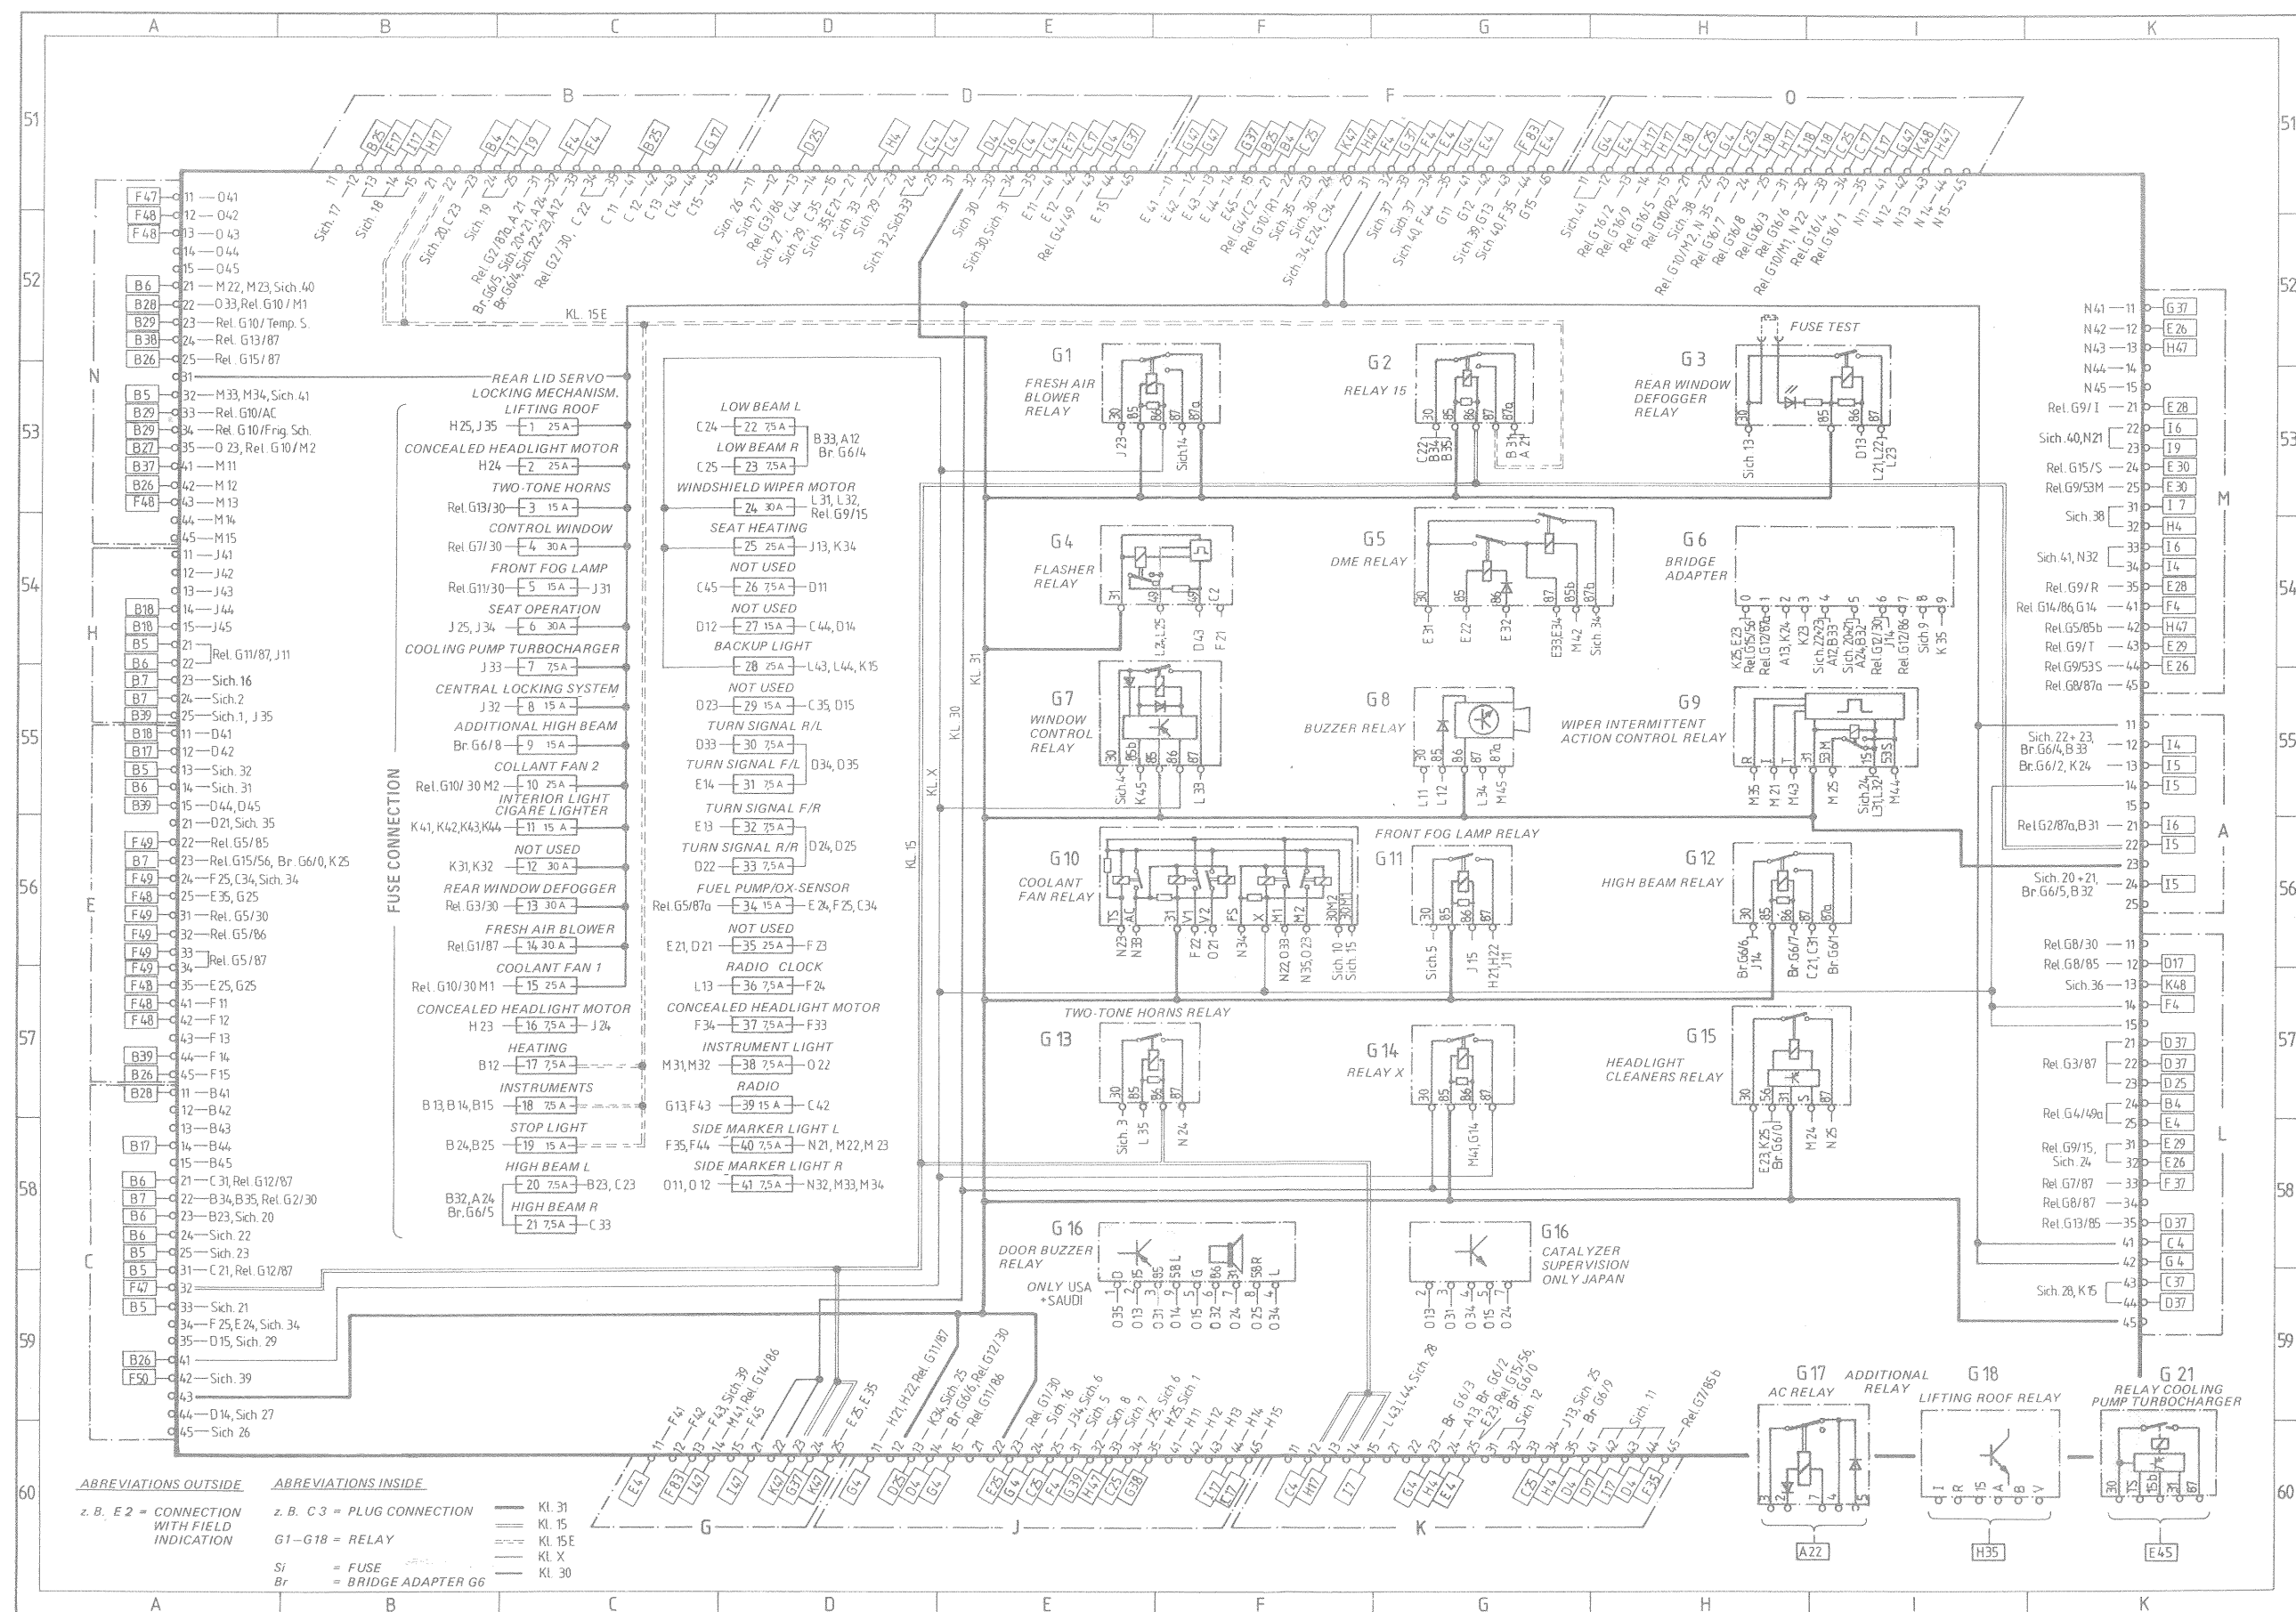


## CENTRAL LOCKING SYSTEM

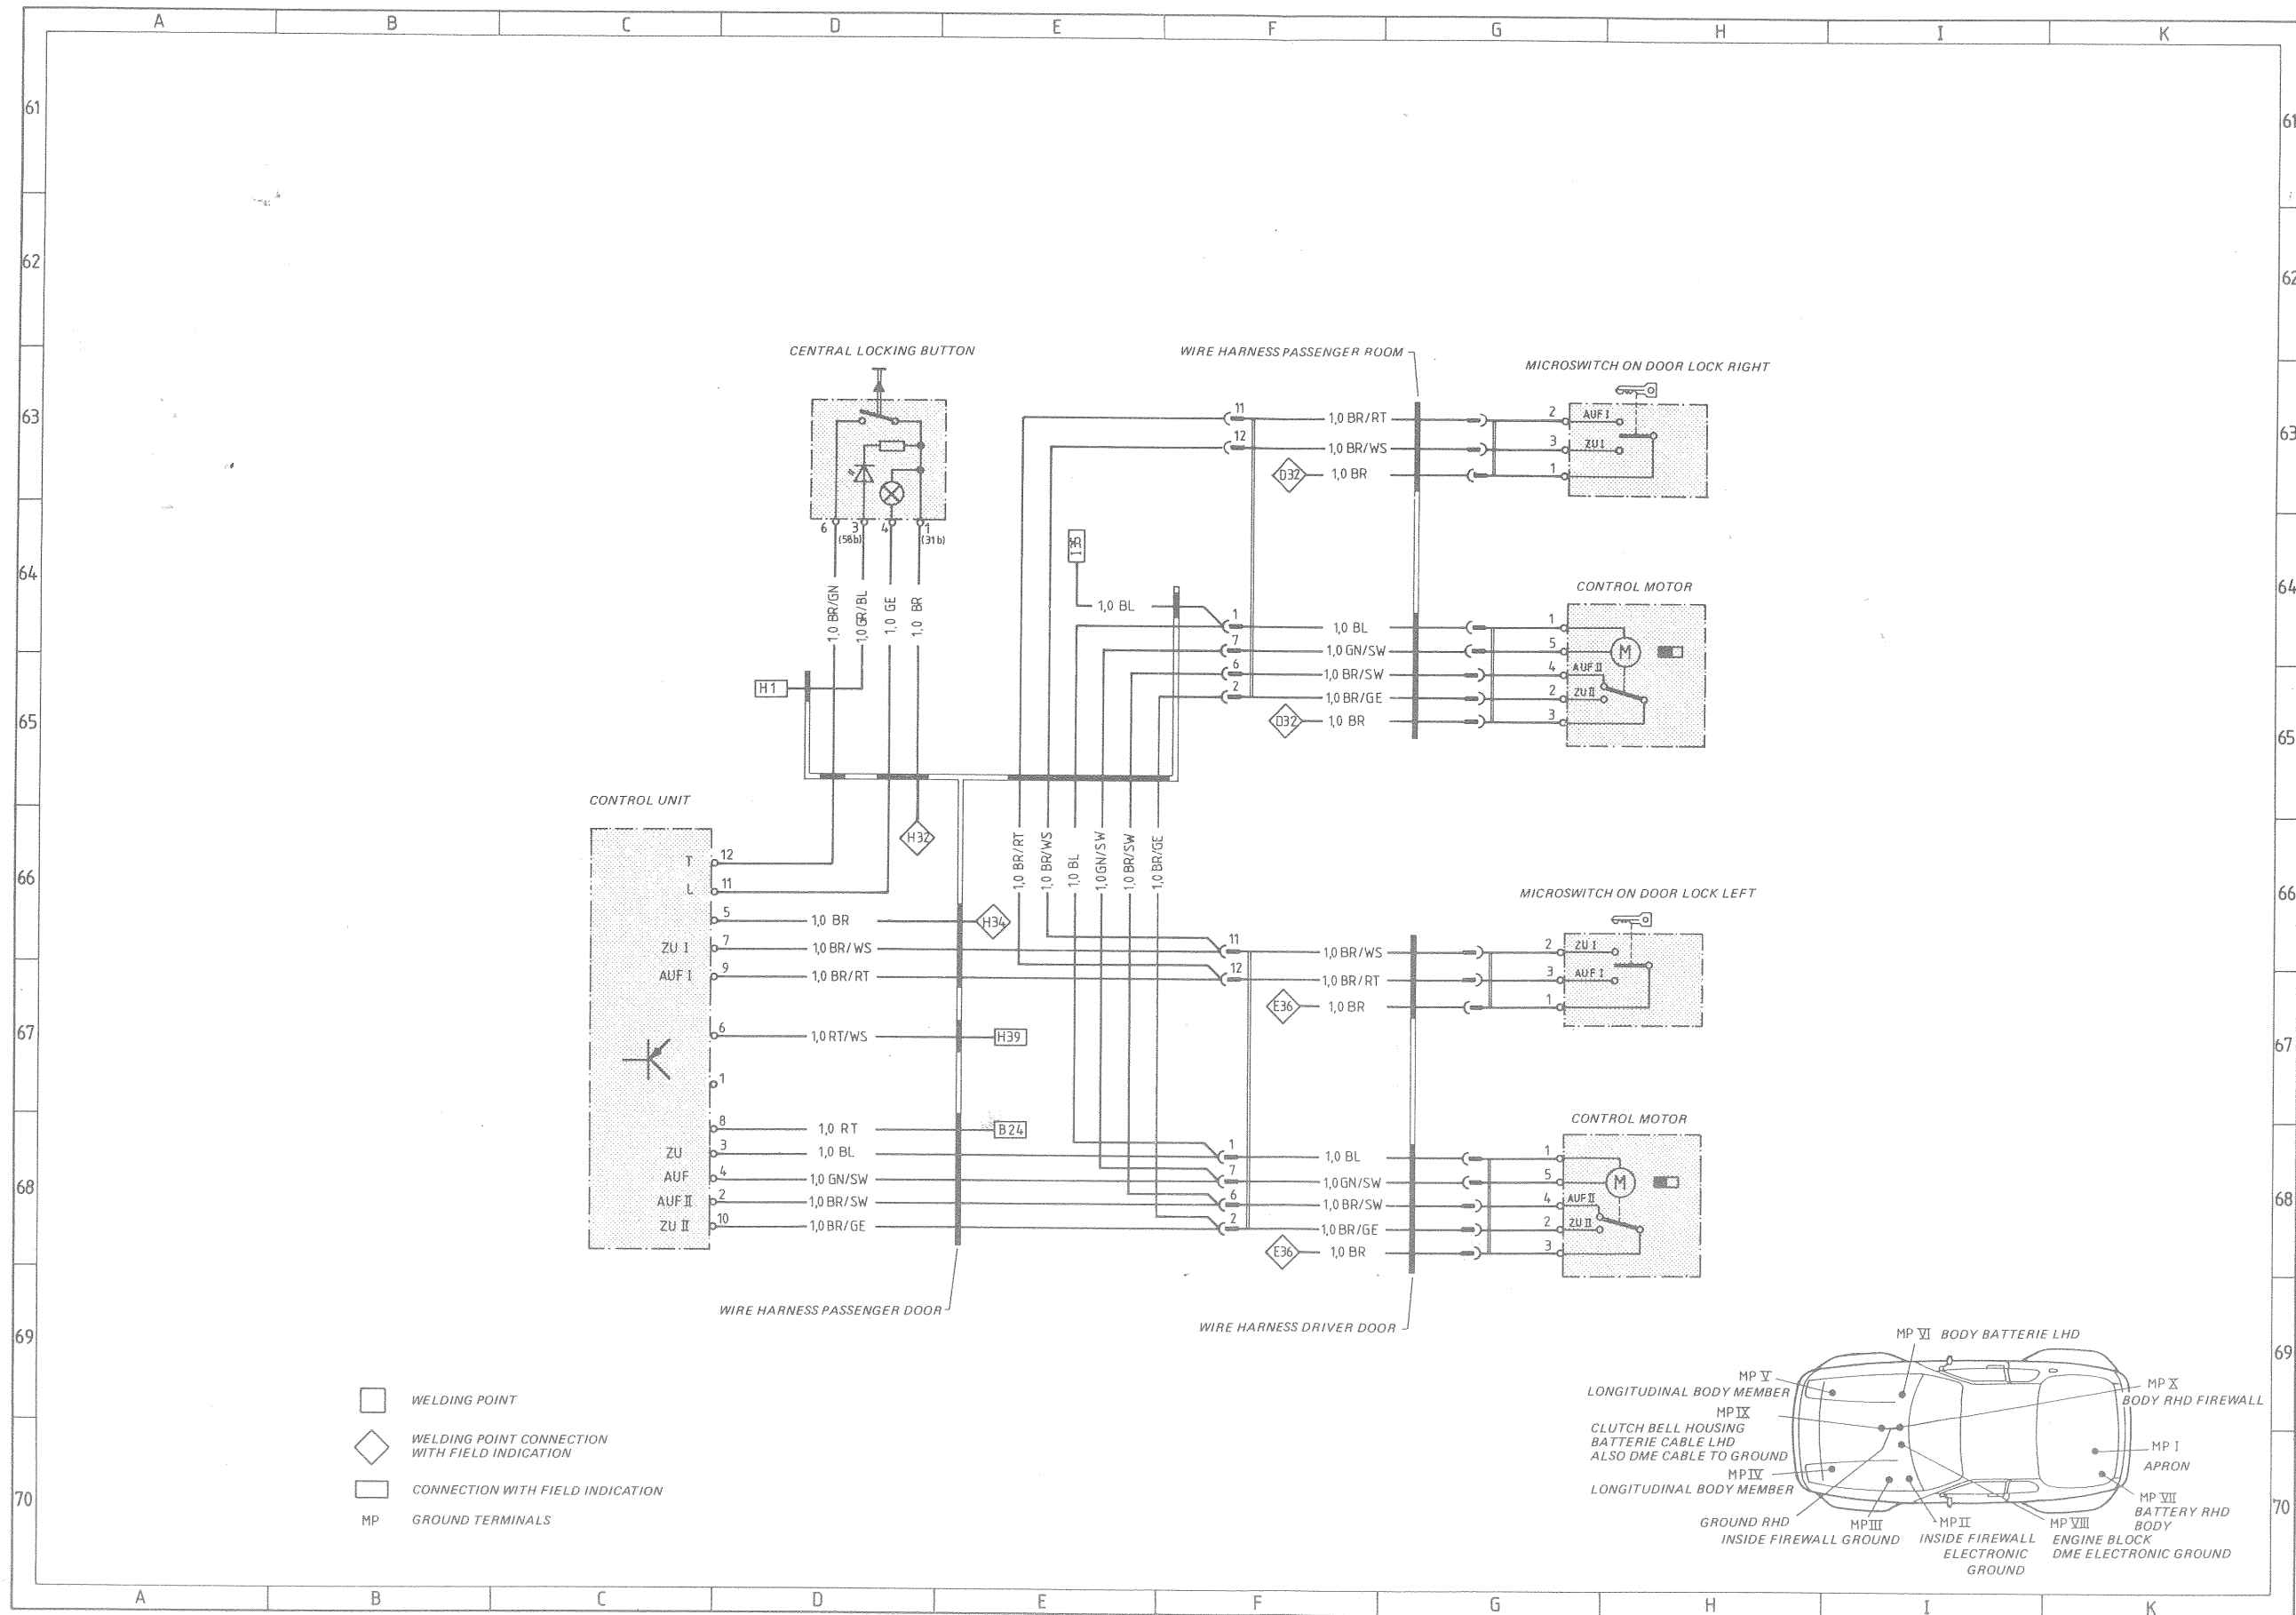



FOG LIGHT, FOG TAIL LIGHT

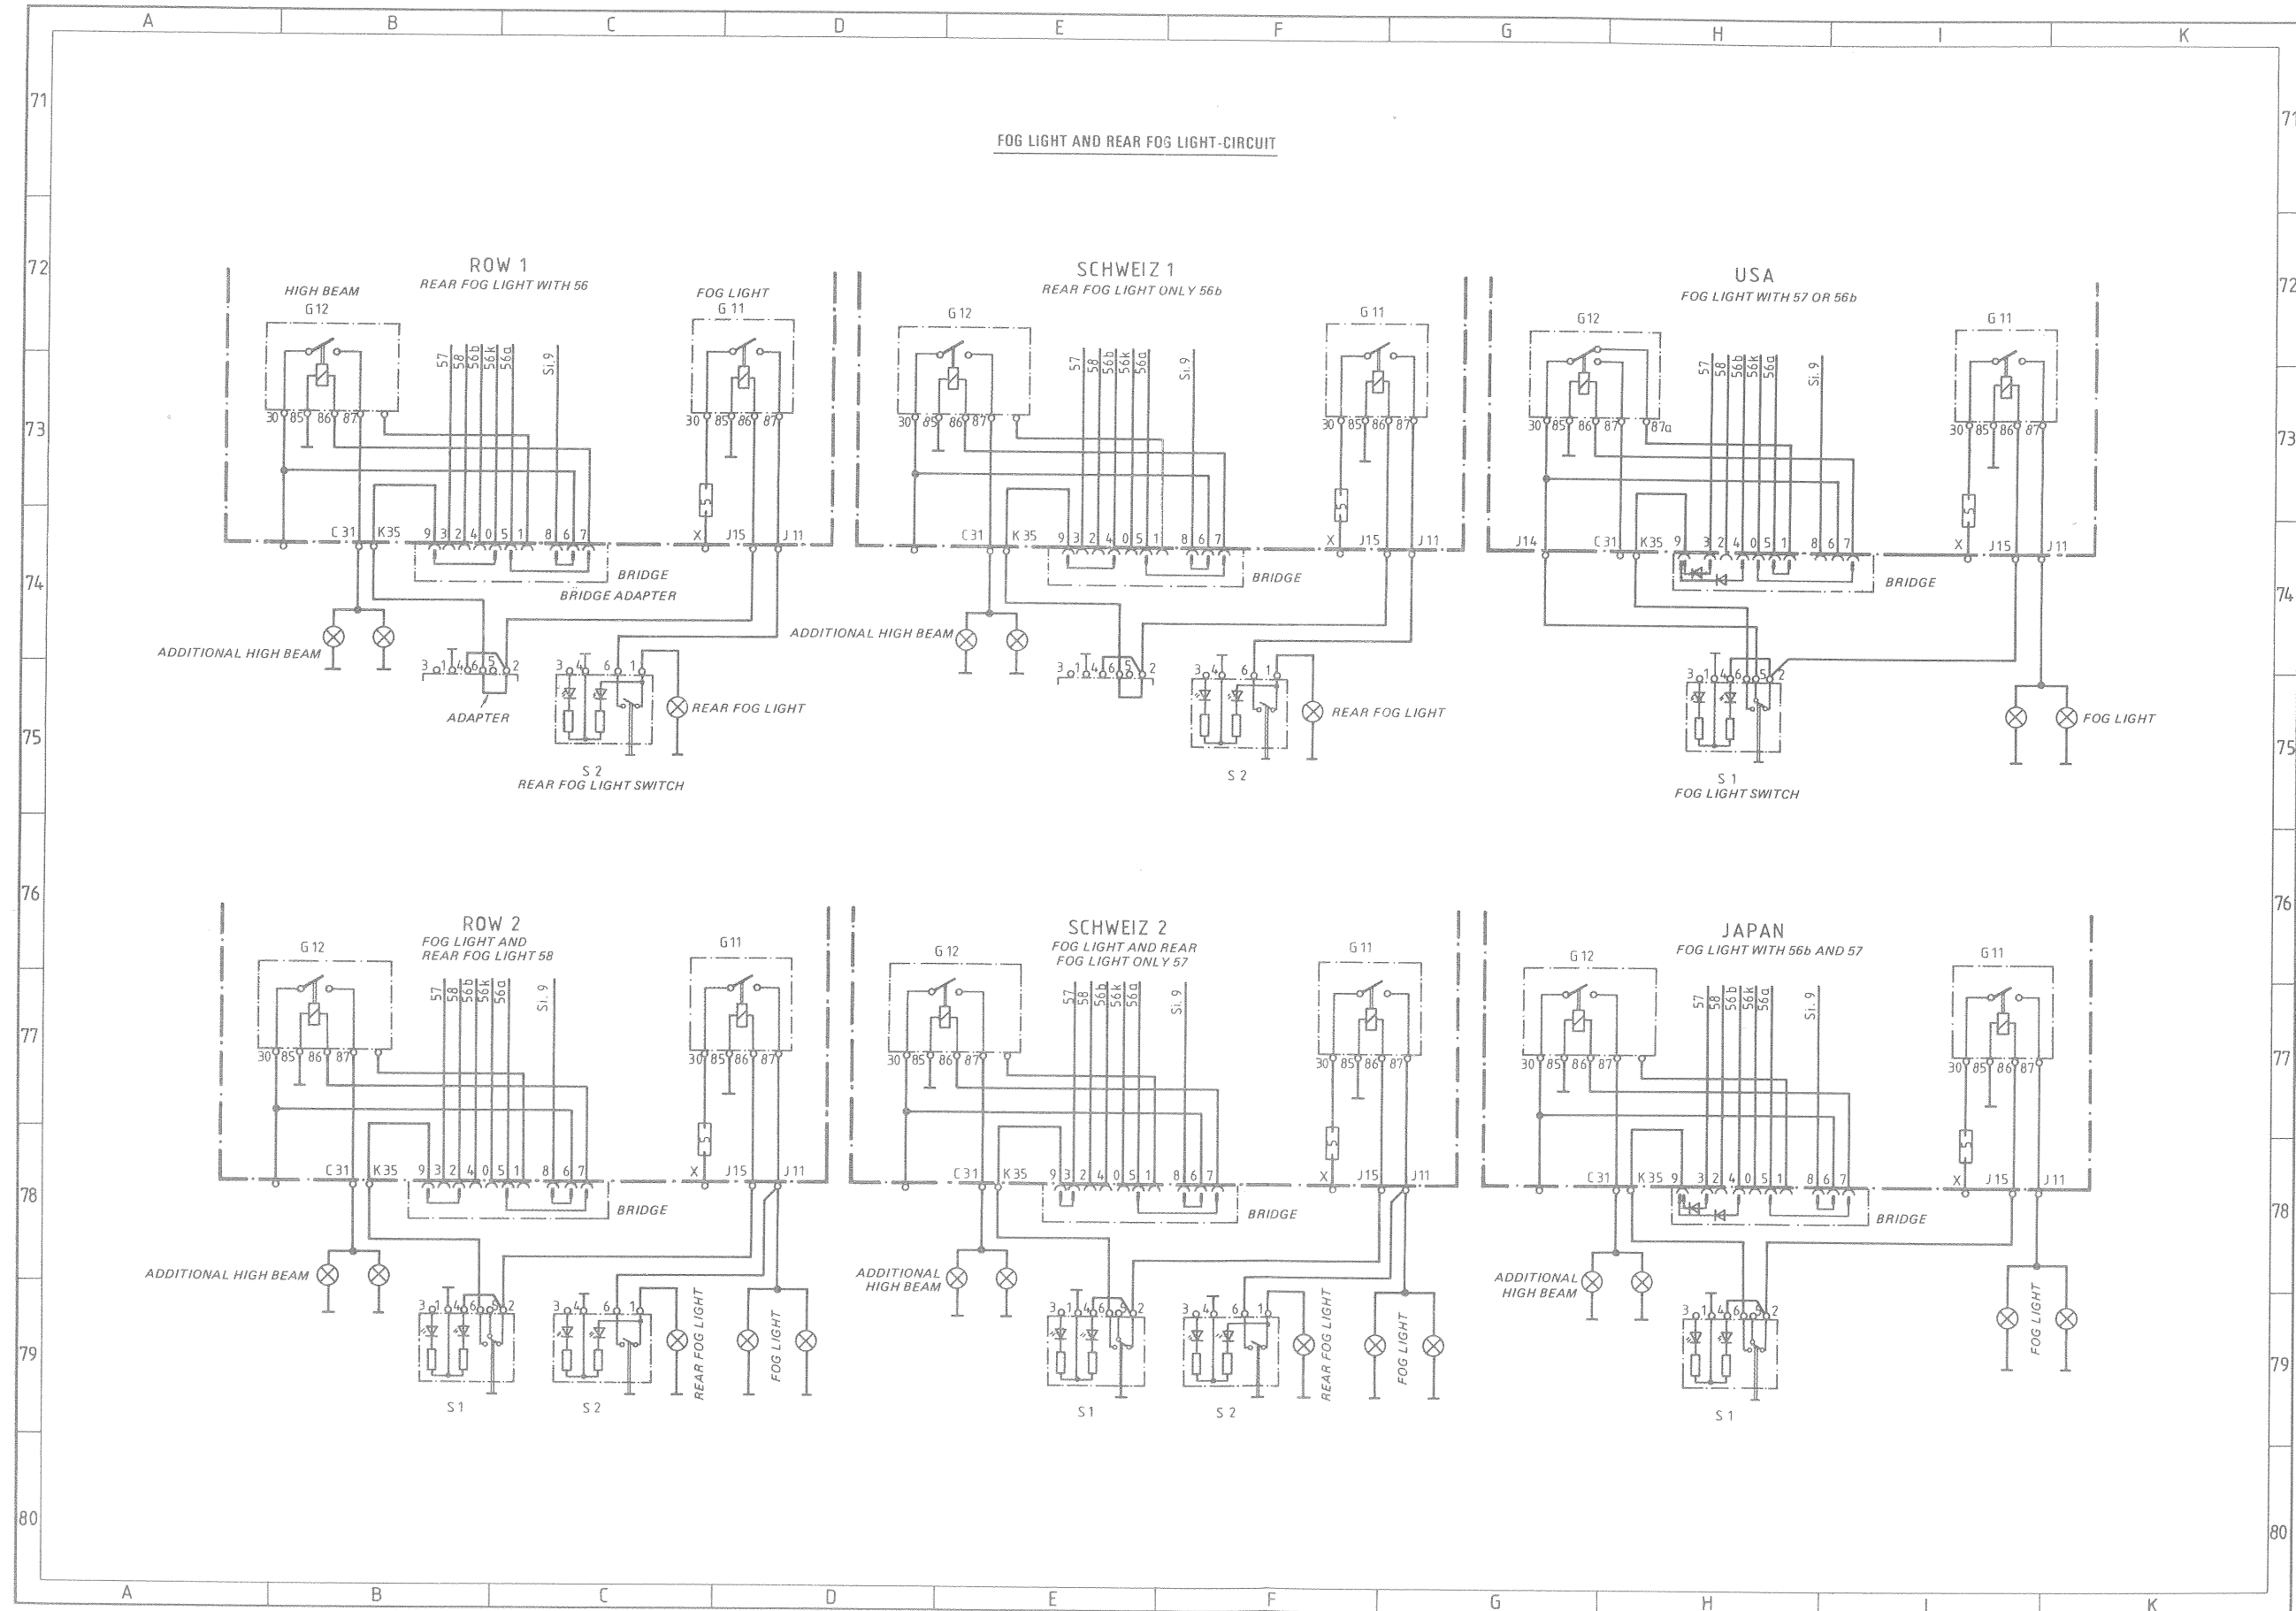


SW - BLACK WS - WHITE RT - RED GN - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

MP = GROUND TERMINALS

Current Flow Diagram

97-93

RADIO

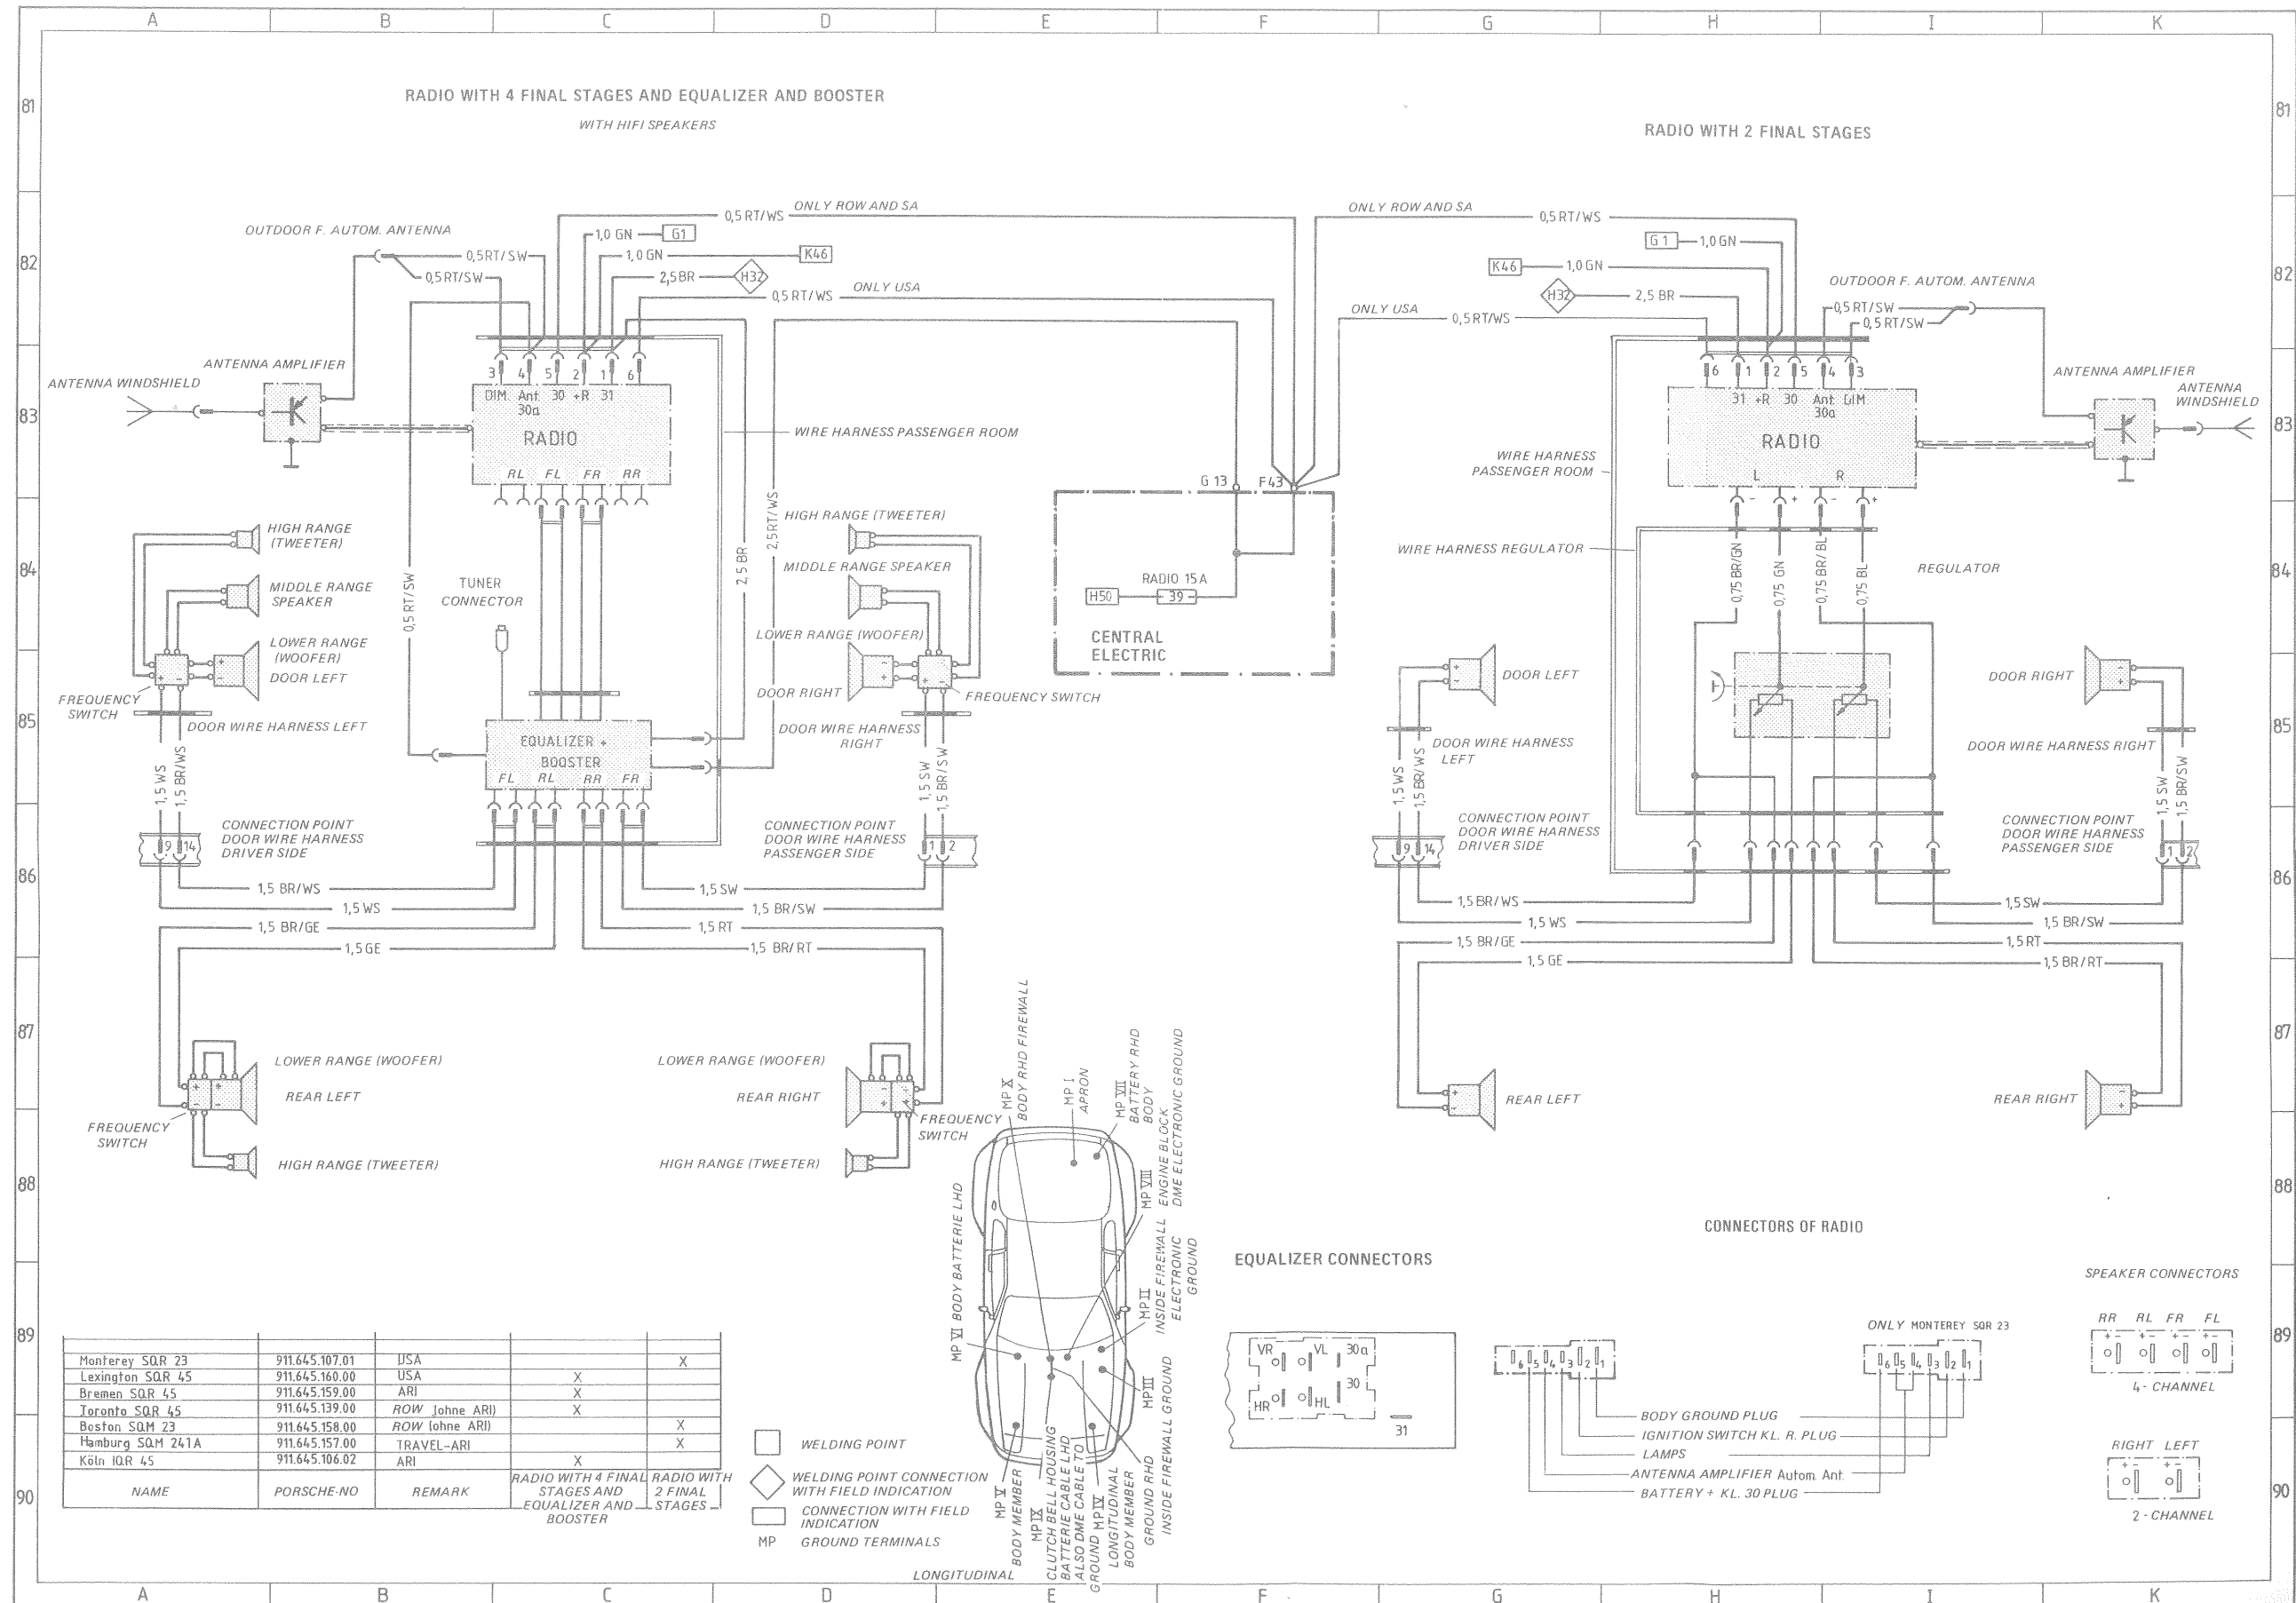

NAME	PORSCHE-NO	REMARK	RADIO WITH 4 FINAL STAGES AND EQUALIZER AND BOOSTER	RADIO WITH 2 FINAL STAGES
Monterey SQR 23	911.645.107.01	USA		X
Lexington SQR 45	911.645.160.00	USA	X	
Bremen SQR 45	911.645.159.00	ARI	X	
Toronto SQR 45	911.645.139.00	ROW (ohne ARI)	X	
Boston SQM 23	911.645.158.00	ROW (ohne ARI)		X
Hamburg SQM 241A	911.645.157.00	TRAVEL-ARI		X
Köln IQR 45	911.645.106.02	ARI	X	

- WELDING POINT
- ◇ WELDING POINT CONNECTION WITH FIELD INDICATION
- CONNECTION WITH FIELD INDICATION
- MP GROUND TERMINALS

